

INSTRUCTION MANUAL
FOR
OVERCURRENT PROTECTION SYSTEM
BE1-951
MODBUS[®] PROTOCOL



Publication: 9328900991
Revision: G 09/17

INTRODUCTION

This instruction manual provides detailed information about the BE1-951 Overcurrent Protection System with the Modbus Protocol.

Disclaimer of Liability and Warranty

Basler Electric provides links to third-party Web sites as a convenience in locating relative information and services for our users. The existence of these links is not to be construed as an endorsement by Basler Electric of the content of any of these third-party sites. **BASLER ELECTRIC MAKES NO EXPRESS, IMPLIED OR STATUTORY WARRANTY, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY, WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE,** warranty of non-infringement or the like, or warranty of title. Basler Electric makes no representation of freedom from computer viruses or of the accuracy of the information and/or the quality of products or services provided by or advertised on these third-party Web sites. **Basler Electric disclaims, to the fullest extent permissible by applicable law, any and all liability and responsibility for any claims or damage that may arise as a result of use of any Web sites maintained by third parties and linked to the Basler Electric Web site.** Basler Electric advises site visitors that links to Web sites not controlled by Basler Electric are not subject to the privacy notice associated with the Basler Electric Web site and, therefore, are advised to read the privacy policies of any third-party sites accessed through this site.

First Printing: April 2000

Printed in USA

© 2000-2017 Basler Electric, Highland Illinois 62249 USA

All Rights Reserved

September 2017

CONFIDENTIAL INFORMATION

of Basler Electric, Highland Illinois, USA. It is loaned for confidential use, subject to return on request, and with the mutual understanding that it will not be used in any manner detrimental to the interest of Basler Electric.

It is not the intention of this manual to cover all details and variations in equipment, nor does this manual provide data for every possible contingency regarding installation or operation. The availability and design of all features and options are subject to modification without notice. Should further information be required, contact Basler Electric.

**BASLER ELECTRIC
12570 STATE ROUTE 143
HIGHLAND IL 62249-1074 USA**

<http://www.basler.com>, info@basler.com

PHONE +1 618.654.2341

FAX +1 618.654.2351

REVISION HISTORY

The following information provides a historical summary of the changes made to this instruction manual (9328900991). Revisions are listed in reverse chronological order.

Manual Revision and Date	Change
G, 09/17	<ul style="list-style-type: none">Added nonvolatile memory caution statement.
F, 01/12	<ul style="list-style-type: none">Updated procedure and replaced screenshots to reflect latest version of Tftpd32 v4.00 in Appendix A.
E, 05/10	<ul style="list-style-type: none">Added Appendix A, <i>Setting Up A DHCP Server Between BE1-951 and PC</i>.
D, 12/08	<ul style="list-style-type: none">Added information for optional Modbus™ over Ethernet.
C, 06/07	<ul style="list-style-type: none">Updated front cover drawing.Added manual part number and revision to footers.
B, 11/03	<ul style="list-style-type: none">In the <i>Register Table</i> section, added <i>Fault Template</i> sub-section containing generator fault and bus frequency points for “most recent” and “selected” faults.
A, 03/01	<ul style="list-style-type: none">Added 32 pickup/time delay/mode, 159X pickup/time delay/mode, 32 mode/block logic, 159X mode block logic, 67N polarizing quantity, and Password Security features.
—, 04/00	<ul style="list-style-type: none">Initial release.



CONTENTS

SECTION 1 • GENERAL INFORMATION	1-1
SECTION 2 • REGISTER TABLE	2-1
SECTION 3 • REGISTER DETAILS	3-1
SECTION 4 • ASCII CROSS REFERENCE	4-1
APPENDIX A • SETTING UP A DHCP SERVER BETWEEN BE1-951 AND PC	A-1



SECTION 1 • GENERAL INFORMATION

TABLE OF CONTENTS

SECTION 1 • GENERAL INFORMATION	1-1
Introduction	1-1
Message Structure	1-1
Modbus Modes of Operation.....	1-2
Modbus RTU	1-2
Modbus/TCP	1-3
Communications Hardware Requirements	1-10
RTU Communication Requirements	1-10
TCP Communication Requirements.....	1-10
Detailed Message Query and Response	1-11
Read Holding Registers	1-11
Return Query Data	1-11
Restart Communications Option	1-11
Listen Only Mode	1-12
Preset Multiple Registers	1-12
Preset Single Register (Write Single Holding Register)	1-13
Data Formats	1-13
Floating Point Data Format (FP)	1-14
Long Integer Data Format (LI).....	1-14
Integer Data Format (INT)	1-14
Short Integer Data Format (SI).....	1-15
ASCII Character Data Format (ASC(1))	1-15
ASCII String Data Format (ASC(x))	1-15
Bit Mapped Data Format (BM(x))	1-16
CRC Error Check	1-16
Session Access Registers.....	1-16
Template Registers	1-17
Fault Summary Registers.....	1-17
Report Generation Registers	1-17
Contiguous Poll Block Registers	1-17
Exception Code Enhancement Registers	1-18

Figures

Figure 1-1. Basler Modbus/TCP Device Discovery Screen	1-4
Figure 1-2. DOS Configuration Utility Screen - Login.....	1-4
Figure 1-3. DOS Configuration Utility Screen - Password.....	1-5
Figure 1-4. DOS Configuration Utility Screen - Enable DHCP Client.....	1-5
Figure 1-5. DOS Configuration Utility Screen - Don't Enable DHCP Client	1-6
Figure 1-6. DOS Configuration Utility Screen - Enter IP Address	1-6
Figure 1-7. DOS Configuration Utility Screen - Enter Subnet Mask.....	1-7
Figure 1-8. DOS Configuration Utility Screen - Enter Default Gateway	1-7
Figure 1-9. DOS Configuration Utility Screen - Return to Main Menu.....	1-7
Figure 1-10. DOS Configuration Utility Screen - Enable DHCP Client.....	1-8
Figure 1-11. DOS Command Shell.....	1-9
Figure 1-12. DOS Command Example with DHCP Server	1-9
Figure 1-13. DOS Command Example without DHCP Server	1-10
Figure 1-14. DOS Command Example of Default IP Address Detected.....	1-10

Tables

Table 1-1. Timing Considerations.....	1-3
Table 1-2. Supported Exception Response Codes	1-3
Table 1-3. Floating Point Format.....	1-14



SECTION 1 • GENERAL INFORMATION

Introduction

This document describes the Modbus® communications protocol employed by BE1-951 relays and how to exchange information with BE1-951 relays over a Modbus network. The BE1-951 communicates by emulating a subset of the Modicon 984 Programmable Controller.

Caution

This product contains one or more *nonvolatile memory* devices. Nonvolatile memory is used to store information (such as settings) that needs to be preserved when the product is power-cycled or otherwise restarted. Established nonvolatile memory technologies have a physical limit on the number of times they can be erased and written. In this product, the limit is 100,000 erase/write cycles. During product application, consideration should be given to communications, logic, and other factors that may cause frequent/repeated writes of settings or other information that is retained by the product. Applications that result in such frequent/repeated writes may reduce the useable product life and result in loss of information and/or product inoperability.

Modbus communications use a master-slave technique in which only the master can initiate a transaction. This transaction is called a query. When appropriate, a slave (BE1-951) responds to the query. When a Modbus master communicates with a slave, information is provided or requested by the master. Information residing in the BE1-951 is grouped categorically as follows:

- Session Parameters
- Global Parameters
- Control Parameters (Select Before Operate)
- Setting Parameters
- Report Parameters
- Metering Parameters

All supported data can be read as specified in the Register Table. Abbreviations are used in the Register Table to indicate the register type. Register types are:

- Read/Write = RW
- Read Only = R -

Select Before Operate (SBO) functions are used to change active settings groups and control outputs. There are two settings groups in the BE1-951, one of which may be selected as active using SBO commands.

When a slave receives a query, the slave responds by either supplying the requested data to the master or performing the requested action. A slave device never initiates communications on the Modbus and will always generate a response to the query unless certain error conditions occur. The BE1-951 is designed to communicate on the Modbus network only as a slave device.

Message Structure

Device Address Field

The device address field contains the unique Modbus address of the slave being queried. The addressed slave repeats the address in the device address field of the response message. This field is 1 byte.

Although Modbus protocol limits a device address from 1 - 247, a BE1-951 can be assigned a device address in the range of 1 - 65534. The address is user-selectable at installation and can be altered during real-time operation.

Function Code Field

The function code field in the query message defines the action to be taken by the addressed slave. This field is echoed in the response message and is altered by setting the most significant bit (MSB) of the field to 1 if the response is an error response. This field is 1 byte in length.

The BE1-951 maps all available data into the Modicon 984 holding register address space (4XXXX) and supports the following function codes:

- Function 03 (03 hex) - read holding registers
- Function 06 (06 hex) - preset single register (write single holding register)
- Function 08 (08 hex), subfunction 00 - diagnostics: return query data
- Function 08 (08 hex), subfunction 01 - diagnostics: restart communications option
- Function 08 (08 hex), subfunction 04 - diagnostics: force listen only mode
- Function 16 (10 hex) - preset multiple registers, non-broadcast and broadcast

Data Block Field

The query data block contains additional information needed by the slave to perform the requested function. The response data block contains data collected by the slave for the queried function. An error response will substitute an exception response code for the data block. The length of this field varies with each query. See the paragraphs on *Register Definitions* in this manual for interpretation of data.

Error Check Field

The error check field provides a method for the slave to validate the integrity of the query message contents and allows the master to confirm the validity of response message contents. This field is 2 bytes.

Modbus® Modes of Operation

A standard Modbus network offers one of three possible transmission modes for communication: ASCII, remote terminal unit (RTU) or Modbus/TCP. The BE1-951 relay supports the RTU or Modbus/TCP modes depending on communication options for the relay. For example, the RTU mode is employed when Com Protocol Option 1 (Modbus over RS485 without Ethernet) or Option 5 (Modbus over RS485 with Ethernet) is ordered. See Figure 1-1, *Style Chart*, in Section 1, *General Information* of the Instruction Manual for the BE1-951 (Basler Electric part number 9328900990). The BE1-951 also supports the Modbus/TCP protocol when the relay is ordered with the Com Protocol Option #7. These two optional modes of operation are described below. ASCII mode is not supported with the BE1-951.

Modbus® RTU

This is a serial transmission interface.

A master can query slaves individually or universally. A universal ("broadcast") query, when allowed, evokes no response from any slave device. If a query to an individual slave device requests actions unable to be performed by the slave, the slave response message contains an exception response code defining the error detected. Exception response codes are quite often enhanced by the information found in the "Error Details" block of holding registers.

Message Structure

Master initiated queries and BE1-951 responses share the same message structure. Each message is comprised of four message fields. They are:

- Device Address (1 byte)
- Function Code (1 byte)
- Data Block (n bytes)
- Error Check field (2 bytes)

Each 8-bit byte in a message contains two 4-bit hexadecimal characters. The message is transmitted in a continuous stream with the LSB of each byte of data transmitted first. Transmission of each 8-bit data byte occurs with one start bit and either one or two stop bits. Parity checking is performed, when enabled, and can be either odd or even. The transmission baud rate is user-selectable, and can be set at installation and altered during real-time operation. The BE1-951 Modbus supported baud rates are 2400, 4800, 9600 and 19200. The factory default baud rate is 9600.

BE1-951 supports both RS-232-C and RS-485 compatible serial interfaces. Both interfaces are accessible from the rear panel of the BE1-951. The RS-232-C interfaces (front and rear) are configured for ASCII command mode while the RS-485 interface is configured for Modbus communication when this option is installed. The sixth character of the relay style number must be "1" or "5" for the relay to be configured for Modbus RTU.

Message Framing and Timing Considerations

When receiving a message via the RS-485 communication port, the BE1-951 requires an inter-byte latency of 3.5 character times before considering the message complete.

Once a valid query is received, the BE1-951 waits a specified amount of time before responding. This time delay is set in the remote delay time parameter with the SG-COM ASCII command. This parameter contains a value from 10 - 200 milliseconds. The default value is 10 milliseconds.

Table 1-1 provides the response message transmission time (in seconds) and 3.5 character times (in milliseconds) for various message lengths and baud rates.

Table 1-1. Timing Considerations

Baud Rate	3.5 Character Time (ms)	Message Tx Time(s)	
		128 Bytes	256 Bytes
2400	16.04	0.59	1.17
4800	8.021	0.29	0.59
9600	4.0104	0.15	0.29
19200	2.0052	0.07	0.15

Error Handling and Exception Responses

Any query received that contains a non-existent device address, a framing error or CRC error is ignored. No response is transmitted. Queries addressed to a BE1-951 with an unsupported function or illegal values in the data block result in an error response message with an exception response code. The exception response codes supported by the BE1-951 are provided in Table 1-2.

Table 1-2. Supported Exception Response Codes

Code	Name	Description
01	Illegal Function	The query Function/Subfunction Code is unsupported; query read of more than 125 registers; query preset of more than 100 registers.
02	Illegal Data Address	A register referenced in the data block does not support queried read/write; query preset of a subset of a numerical register group.
03	Illegal Data Value	A preset register data block contains an incorrect number of bytes or one or more data values out of range.

Modbus/TCP

This is an optional Ethernet-enabled interface using the Transmission Control Protocol/Internet Protocol (TCP/IP) as described below. Emphasis is placed on the initial setup of the relay. Should questions arise, please contact your sales representative or Technical Services at Basler Electric, Highland, Illinois. **The BE1-951 relay comes with DHCP (Dynamic Host Configuration Protocol) enabled.** Refer to Appendix A, *Setting Up a DHCP Server Between BE1-951 and PC*, for information on setting up a DHCP server between the BE1-951 and your PC using third-party software. To set a static IP address (recommended), follow the instructions below. To verify or set DHCP, see the following description.

NOTE

It could take up to two minutes after power-up for the relay to establish a TCP connection.

Change from DHCP to Static IP Address on a Hubbed/Switched Network with a DHCP Server Running

Make sure that the relay is connected to the network. Start the Basler Modbus/TCP Device Discovery application that can be found on the CD provided with the relay. Wait at least 90 seconds after powering on the relay and then click the *Refresh* button. A screen similar to Figure 1-1 will appear and display all the Modbus/TCP-enabled units connected to your network.

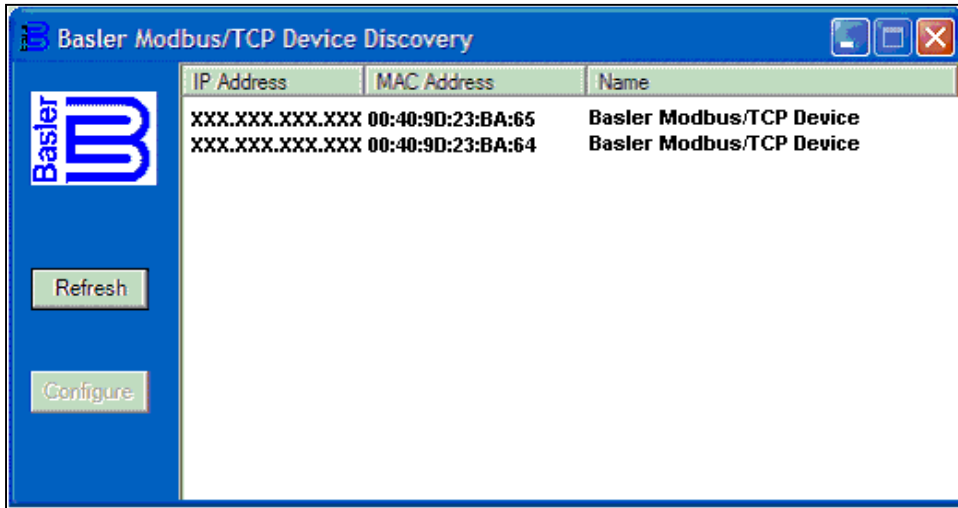


Figure 1-1. Basler Modbus/TCP Device Discovery Screen

Obtain the factory test report, which is included with each BE1-951 relay, and locate the MAC address. Highlight the IP address of the relay that you wish to configure. The IP address of interest will correspond with the MAC address shown on the factory test report. After highlighting the appropriate IP address, click the *Configure* button. This will launch a telnet connection between your PC and the corresponding relay. See Figure 1-2.

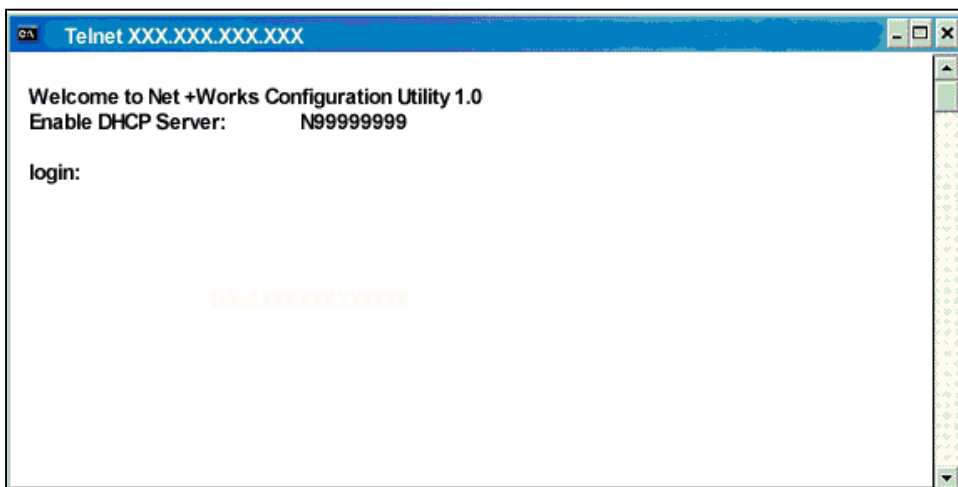


Figure 1-2. DOS Configuration Utility Screen - Login

The default parameters to log in are:

Login: root <Enter>
Password: Netsilicon

The password is case sensitive, so only the first letter should be capitalized. Press the *Enter* key. Once login is successful, the screen shown in Figure 1-3 will appear.

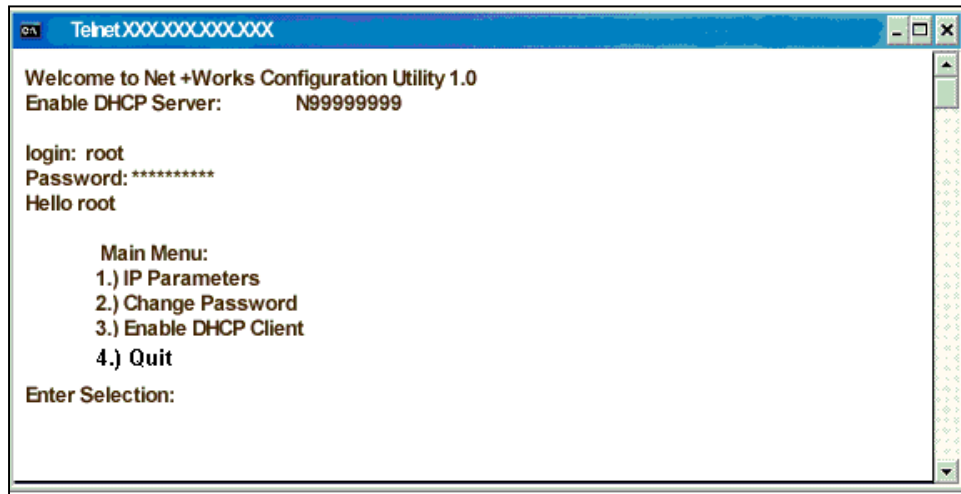


Figure 1-3. DOS Configuration Utility Screen - Password

Type 3 (Enable DHCP Client) and press the *Enter* key. Figure 1-4 will appear. **Note:** This process (i.e., Enable DHCP Client) must be followed to assign a static IP address.

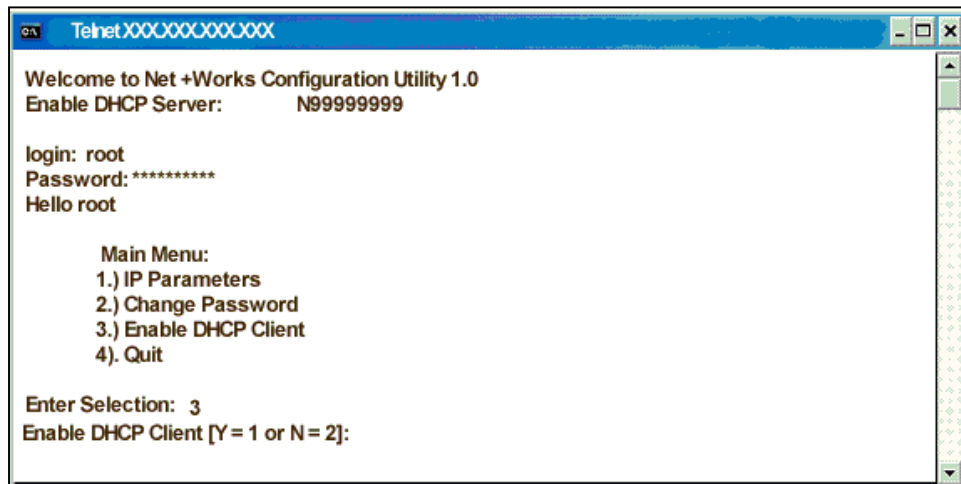


Figure 1-4. DOS Configuration Utility Screen - Enable DHCP Client

It will be prompted to enable the DHCP client with a YES (1) or disable it with a NO (2). Type 2 to disable the DHCP Client and press the *Enter* key. After a few seconds, the following screen (Figure 1-5) is displayed.

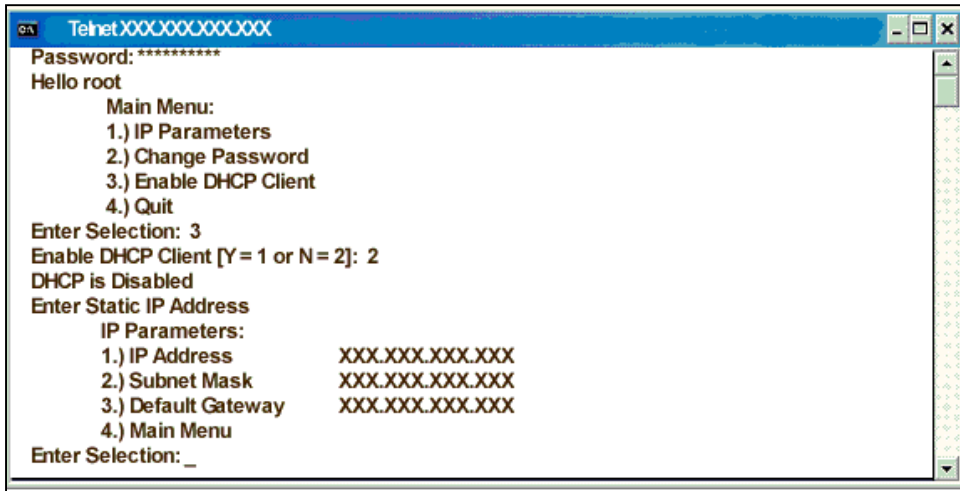


Figure 1-5. DOS Configuration Utility Screen - Don't Enable DHCP Client

Type 1 and press the *Enter* key. Then type the static **IP Address** for the BE1-951 and press the *Enter* key. A screen similar to Figure 1-6 will appear.

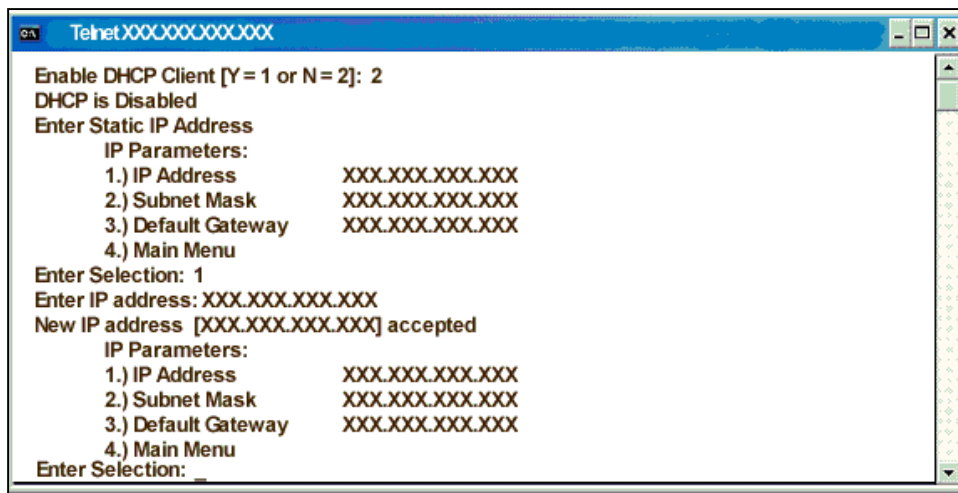


Figure 1-6. DOS Configuration Utility Screen - Enter IP Address

Type 2 and press the *Enter* key. Then type the **Subnet Mask** for the BE1-951 and press the *Enter* key. A screen such as that shown in Figure 1-7 will appear.

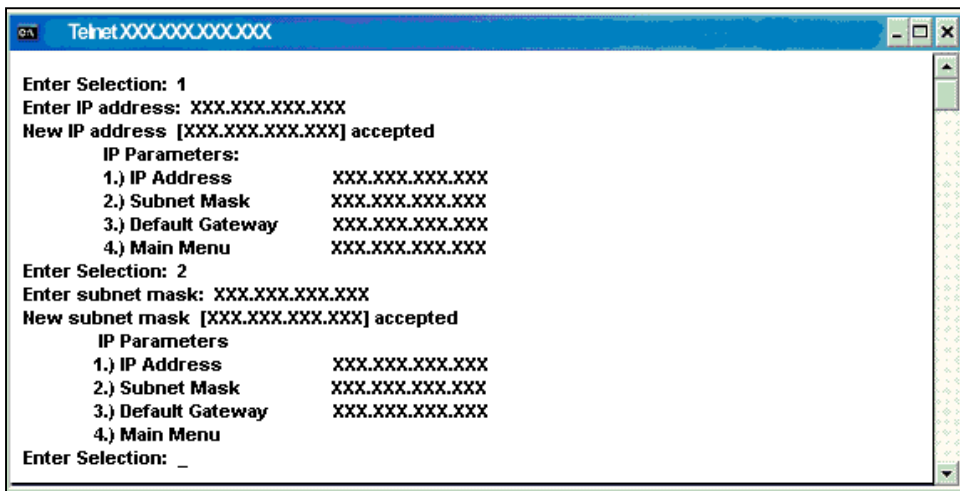


Figure 1-7. DOS Configuration Utility Screen - Enter Subnet Mask

Type 3 and press the *Enter* key. See Figure 1-8. Then type the **Default Gateway** address for the BE1-951 and press the *Enter* key.

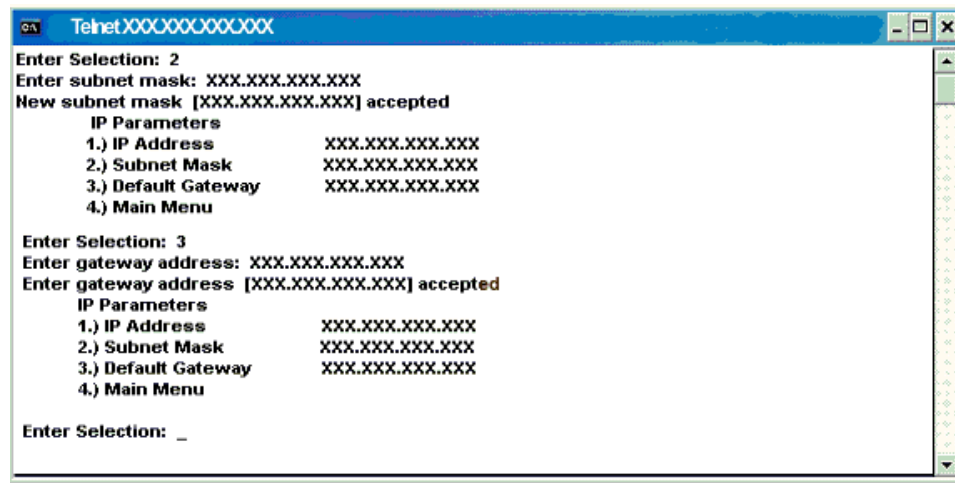


Figure 1-8. DOS Configuration Utility Screen - Enter Default Gateway

Type 4 and press the *Enter* key. After a few seconds a screen similar to the one shown in Figure 1-9 will appear.

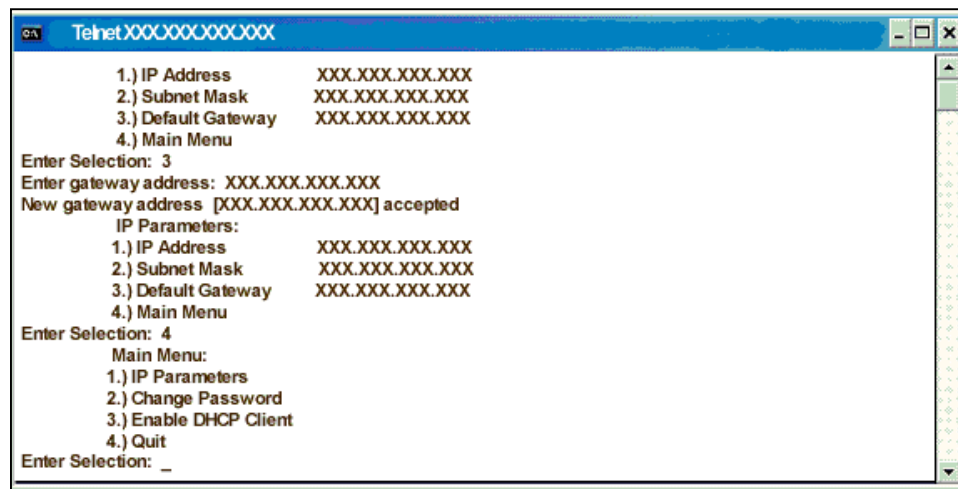


Figure 1-9. DOS Configuration Utility Screen - Return to Main Menu

At this time, the screen refreshes with the new IP parameters. The information that was changed is saved but it will take a few seconds for the save operation to complete. In addition, from the *Main Menu*, the user is encouraged to change the password from the default value.

To quit and exit the DOS window, type 4 and press the *Enter* key or click the X in the upper right hand corner of the screen. In order to finish the IP setting procedure, it will be necessary to cycle the relay power. This resets the parameters. Once this is completed, as a self-check, wait about 90 seconds and run the Discovery program again to verify that the IP parameters are correct. Then exit the configuration utility program. The relay is now ready to communicate with the PC.

Verifying or Setting the DHCP

This protocol assigns a dynamic IP addresses to devices on a network. With dynamic addressing, a device can have a different IP address every time it connects to the network. Since this may not be desirable within a company's local area network, the IP address may have to be set statically. That is,

DHCP will have to be disabled and a permanent IP assigned as previously discussed. Previously shown figures will be referenced in the following discussion on enabling the DHCP.

Start the Basler Modbus/TCP Device Discovery application that can be found on the CD provided with the relay. See Figure 1-1. Using the Ethernet port on the relay, make sure the relay is connected to the company network. Be aware that it takes about 90 seconds after powering up a relay before it can be discovered.

Clicking the *Refresh* button displays all Web-enabled units connected to the network. Highlight the connection (i.e., your IP address) that you wish to configure. The IP address of interest will be related to the MAC address shown on the factory test report. After highlighting the appropriate **IP Address**, click the *Configure* button. This will launch a telnet application connected to the corresponding relay. See Figure 1-2.

The default parameters to login are:

Login: root <Enter>
Password: Netsilicon

The password is case sensitive, so only the first letter should be capitalized. Press the *Enter* key. Once login is successful, a screen similar to the one shown in Figure 1-3 will come up.

Type 3 (**Enable DHCP Client**) and press the *Enter* key. Figure 1-4 will appear.

You will be prompted to enable the DHCP client with a YES (1) or disable it with a NO (2). Type 1 and press the *Enter* key. The response will be “**DHCP is Enabled**” as shown in Figure 1-10.

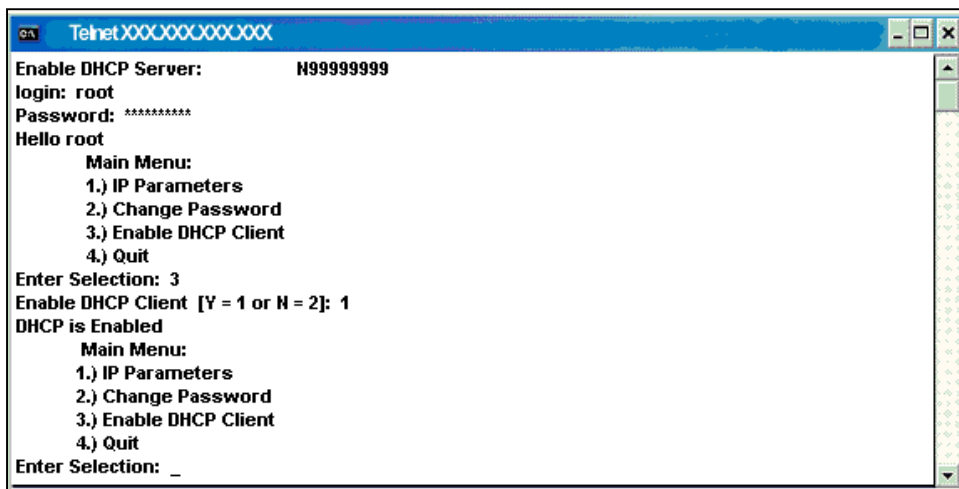


Figure 1-10. DOS Configuration Utility Screen - Enable DHCP Client

In addition, from the *Main Menu*, the user is encouraged to change the password from the default value. Once the new password is changed, type 4 and press the *Enter* key to exit the program or click the X in the upper right hand corner of the screen. The information that was changed is saved but it will take a few seconds for the save operation to complete. In order to finish the setup procedure, it will be necessary to cycle the relay power. This resets the parameters. Once this is completed, as a self-check, wait about 90 seconds and run the Discovery program again to verify that the DHCP client has been enabled. Then exit the configuration utility program. The relay is now ready to communicate with the PC.

Change from DHCP to Static IP Address on a Single Wire Network (Between PC and BE1-951)

- 1) To discover the IP address of a single BE1-951 relay on an Ethernet network, the BE1-951 must be connected to a hub or network switch that your PC's NIC (Network Interface Card) is also connected to. This is typically done by connecting a CAT 5 (Category 5) Ethernet cable from your PC's NIC to a network hub or switch and connecting the Ethernet port of the BE1-951 to the same network hub or switch with a second CAT 5 Ethernet cable.
- 2) Your PC's NIC can also be directly connected to the Ethernet port on the BE1-951 if you use a **Crossover** CAT5 Ethernet cable between them.

- 3) In most Ethernet networks, a DHCP (Dynamic Host Configuration Protocol) server from a router or another PC is connected to your Ethernet network through the hub or switch mentioned in step 1 above. If there is NO DHCP server, then a default **169.254.xxx.xxx** IP address will be set by your PC and by the BE1-951 after connecting the Ethernet cables. This may take a few minutes after the cables are connected.
- 4) Testing your network can be done from your computer's DOS command shell. To open a DOS command shell in Windows®, select the Start RUN Open: **cmd**. (Figure 1-11).

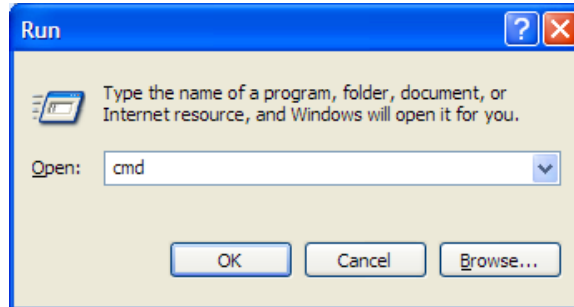


Figure 1-11. DOS Command Shell

- 5) Example **WITH** a DHCP server
In the DOS command shell type **ipconfig** to see the available networks (Figure 1-12):

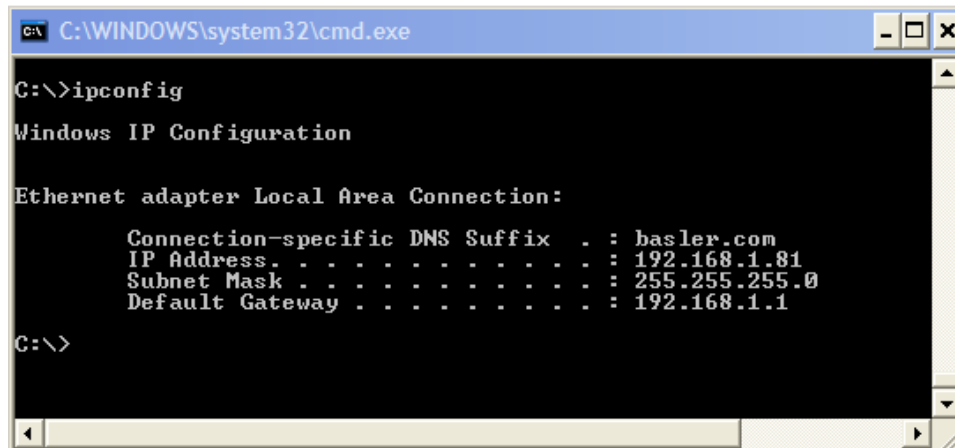


Figure 1-12. DOS Command Example with DHCP Server

- 6) Example **WITHOUT** a DHCP server
In the DOS command shell type **ipconfig** to see the available networks (Figure 1-13):

```

C:\WINDOWS\system32\cmd.exe
C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address . . . . . : 0.0.0.0
    Subnet Mask . . . . . : 0.0.0.0
    Default Gateway . . . . . : 

C:\>

```

Figure 1-13. DOS Command Example without DHCP Server

After a few minutes (when a DHCP server is not detected) a default IP address with the format 169.254.xxx.xxx address will be reported. (Figure 1-14)

```

C:\WINDOWS\system32\cmd.exe
C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    Autoconfiguration IP Address. . . : 169.254.45.135
    Subnet Mask . . . . . : 255.255.0.0
    Default Gateway . . . . . : 

C:\>

```

Figure 1-14. DOS Command Example of Default IP Address Detected

- 7) Once your PC has an IP address, the BE1-951 BESTCOMS™ PC software program or the Digi Discovery program (**dgdiscvr.exe**) can be used to determine the IP address of the BE1-951. A BE1-951 with style number xxxxx7x (Modbus/TCP over Ethernet) must use the Modbus ping software program (**ruiping.exe**)
- 8) In the Basler Modbus/TCP Device Discovery program, click on *Refresh* to discover the IP address.

Communications Hardware Requirements

RTU Communication Requirements

The BE1-951 RS-485 physical interface is three positions of a terminal strip with locations for Send/Receive A (A), Send/Receive B (B) and Signal Ground (C). Refer to the BE1-951 Instruction Manual (9328900990) for further details.

TCP Communication Requirements

The BE1-951 Ethernet port (RJ-45) is used with the Ethernet option. The relay supports 10BaseT using Cat 5 / Cat 5e shielded twisted pair. Refer to the BE1-951 Instruction Manual (9328900990) for further details.

Detailed Message Query and Response

A detailed description of BE1-951 supported message queries and responses is provided in the following paragraphs.

Read Holding Registers

Query

This query message requests a register or block of registers to be read. The data block contains the starting register address and the quantity of registers to be read. A register address of N will read holding register N+1. If the query is a broadcast (device address = 0), no response message is returned.

Device Address
Function Code = 03 (hex)
Starting Address Hi
Starting Address Lo
No. of Registers Hi
No. of Registers Lo
CRC Hi error check
CRC Lo error check

The number of registers cannot exceed 125 without causing an error response with the exception code for an illegal function.

Response

The response message contains the data queried. The data block contains the block length in bytes followed by the data (one Data Hi byte and one Data Lo byte) for each requested register.

Reading an unassigned holding register returns a value of zero.

Device Address
Function Code = 03 (hex)
Byte Count
Data Hi (For each requested register, there is one Data Hi and one Data Lo.)
Data Lo
.
.
Data Hi
Data Lo
CRC Hi error check
CRC Lo error check

Return Query Data

This query contains data to be returned (looped back) in the response. The response and query messages should be identical. If the query is a broadcast (device address = 0), no response message is returned.

Device Address
Function Code = 08 (hex)
Subfunction Hi = 00 (hex)
Subfunction Lo = 00 (hex)
Data Hi = xx (don't care)
Data Lo = xx (don't care)
CRC Hi error check
CRC Lo error check

Restart Communications Option

This query causes the remote communications function of the BE1-951 to restart, terminating an active listen only mode of operation. No effect is made upon primary relay operations. Only the remote communications function is affected. If the query is a broadcast (device address = 0), no response message is returned.

If the BE1-951 receives this query while in the listen only mode, no response message is generated. Otherwise, a response message identical to the query message is transmitted prior to the communications restart.

Device Address
Function Code = 08 (hex)
Subfunction Hi = 00 (hex)
Subfunction Lo = 01 (hex)
Data Hi = xx (don't care)
Data Lo = xx (don't care)
CRC Hi error check
CRC Lo error check

Listen Only Mode

This query forces the addressed BE1-951 to the listen only mode for Modbus communications, isolating it from other devices on the network. No responses are returned.

While in the listen only mode, the BE1-951 continues to monitor all queries. The BE1-951 does not respond to any other query until the listen only mode is removed. All write requests with a query to Preset Multiple Registers (Function Code = 16) are also ignored. When the BE1-951 receives the restart communications query, the listen only mode is removed.

Device Address
Function Code = 08 (hex)
Subfunction Hi = 00 (hex)
Subfunction Lo = 04 (hex)
Data Hi = xx (don't care)
Data Lo = xx (don't care)
CRC Hi error check
CRC Lo error check

Preset Multiple Registers

A preset multiple registers query could address multiple registers in one slave or multiple slaves. If the query is a broadcast (device address = 0), no response message is returned.

Query

A Preset Multiple Register query message requests a register or block of registers to be written. The data block contains the starting address and the quantity of registers to be written, followed by the Data Block byte count and data. The BE1-951 will perform the write when the device address is the same as the BE1-951's remote address or when the device address is 0. A device address is 0 for a broadcast query.

A register address of N will write Holding Register N+1.

Data will cease to be written if any of the following exceptions occur.

- Queries to write to Read Only registers result in an error response with Exception Code of "Illegal Data Address".
- Queries attempting to write more than 100 registers cause an error response with Exception Code "Illegal Function".
- An incorrect Byte Count will result in an error response with Exception Code of "Illegal Data Value".
- There are several instances of registers that are grouped together to collectively represent a single numerical BE1-951 data value (i.e. - floating point data and 32-bit integer data). A query to write a subset of such a register group will result in an error response with Exception Code "Illegal Data Address".
- A query to write a not allowed value (out of range) to a register results in an error response with Exception Code of "Illegal Data Value".

Device Address

Function Code = 10 (hex)
Starting Address Hi
Starting Address Lo
No. of Registers Hi
No. of Registers Lo
Byte Count
Data Hi
Data Lo
. .
Data Hi
Data Lo
CRC Hi error check
CRC Lo error check

Response

The response message echoes the starting address and the number of registers. There is no response message when the query is a broadcast (device address = 0).

Device Address
Function Code = 10 (hex)
Starting Address Hi
Starting Address Lo
No. of Registers Hi
No. of Registers Lo
CRC Hi Error Check
CRC Lo Error Check

Preset Single Register (Write Single Holding Register)

A Preset Single Register query message requests a single register to be written. The BE1-951 will perform the write when the device address is the same as the BE1-951's remote address.

Query

Data will cease to be written if any of the following exceptions occur.

- Queries to write to Read Only registers result in an error response with Exception Code of "Illegal Data Address".
- A query to write an unallowed value (out of range) to a register results in an error response with Exception Code of "Illegal Data Value".

Device Address
Function Code = 06 (hex)
Address Hi
Address Lo
Data Hi
Data Lo
CRC Hi error check
CRC Lo error check

Response

The response message echoes the Query message after the register has been altered.

Data Formats

BE1-951 data varies from one to four bytes in length. Single byte data resides in the holding register least-significant byte with the most-significant byte set to zero. Floating point data and long integer data (each 32-bit in length) place the two most-significant bytes in the higher holding register address of the associated register pair.

Floating Point Data Format (FP)

The Modbus floating point data format uses two consecutive holding registers to represent a data value. The first register contains the low-order 16 bits of the following 32 bit format:

- MSB is the sign bit for the floating point value (0 = positive).
- The next 8 bits are the exponent biased by 127 decimal.
- The 23 LSBs comprise the normalized mantissa. The most-significant bit of the mantissa is always assumed to be 1 and is not explicitly stored, yielding an effective precision of 24 bits.

The value of the floating point number is obtained by multiplying the binary mantissa times two raised to the power of the unbiased exponent. The assumed bit of the binary mantissa has the value of 1.0, with the remaining 23 bits providing a fractional value. Table 1-3 shows the floating point format.

Table 1-3. Floating Point Format

Sign	Exponent + 127	Mantissa
1 Bit	8 Bits	23 Bits

The floating point format allows for values ranging from approximately 8.43×10^{-37} to 3.38×10^{38} . A floating point value of all zeroes is the value zero. A floating point value of all ones (not a number) signifies a value currently not applicable or disabled.

Example: The value 95,800 represented in floating point format is hexadecimal 47BB1C00. This number will read from two consecutive holding registers as follows:

<u>Holding Register</u>	<u>Value</u>
K (Hi Byte)	hex 1C
K (Lo Byte)	hex 00
K+1 (Hi Byte)	hex 47
K+1 (Lo Byte)	hex BB

The same byte alignments are required to write.

Long Integer Data Format (LI)

The Modbus long integer data format uses two consecutive holding registers to represent a 32 bit data value. The first register contains the low-order 16 bits and the second register contains the high-order 16 bits.

Example: The value 95,800 represented in long integer format is hexadecimal 0x00017638. This number will read from two consecutive holding registers as follows:

<u>Holding Register</u>	<u>Value</u>
K (Hi Byte)	hex 76
K (Lo Byte)	hex 38
K+1 (Hi Byte)	hex 00
K+1 (Lo Byte)	hex 01

The same byte alignments are required to write.

Integer Data Format (INT)

The Modbus integer data format uses a single holding register to represent a 16 bit data value.

Example: The value 4660 represented in integer format is hexadecimal 0x1234. This number will read from a holding register as follows:

<u>Holding Register</u>	<u>Value</u>
K (Hi Byte)	hex 12
K (Lo Byte)	hex 34

The same byte alignments are required to write.

Short Integer Data Format (SI)

The Modbus short integer data format uses a single holding register to represent an 8 bit data value. The holding register high byte will always be zero.

Example: The value 132 represented in short integer format is hexadecimal 0x84. This number will read from a holding register as follows:

<u>Holding Register</u>	<u>Value</u>
K (Hi Byte)	hex 00
K (Lo Byte)	hex 84

The same byte alignments are required to write.

ASCII Character Data Format (ASC(1))

The Modbus ASCII character data format uses a single holding register to represent a single character value. The holding register high byte will always be zero with the ASCII character code in the low byte.

Example: The character 'D' represented in ASCII character format is hexadecimal 44. This number will read from a holding register as follows:

<u>Holding Register</u>	<u>Value</u>
K (Hi Byte)	hex 00
K (Lo Byte)	hex 44

The same byte alignments are required to write.

ASCII String Data Format (ASC(x))

The Modbus ASCII string data format uses one or more holding registers to represent a sequence, or string, of character values. If the string contains a single character, the holding register high byte will contain the ASCII character code and the low byte will be zero.

Example: The string "PASSWORD" represented in ASCII string format will read as follows:

<u>Holding Register</u>	<u>Value</u>
K (Hi Byte)	'P'
K (Lo Byte)	'A'
K+1 (Hi Byte)	'S'
K+1 (Lo Byte)	'S'
K+2 (Hi Byte)	'W'
K+2 (Lo Byte)	'O'
K+3 (Hi Byte)	'R'
K+3 (Lo Byte)	'D'

Example: If the above string is changed to "P", the new string will read as follows:

<u>Holding Register</u>	<u>Value</u>
K (Hi Byte)	'P'
K (Lo Byte)	hex 00
K+1 (Hi Byte)	hex 00
K+1 (Lo Byte)	hex 00
K+2 (Hi Byte)	hex 00
K+2 (Lo Byte)	hex 00
K+3 (Hi Byte)	hex 00
K+3 (Lo Byte)	hex 00

The same byte alignments are required to write.

Bit Mapped Data Format (BM(x))

The bit mapped data format uses two or more holding registers to represent a sequence of bit values. The Modbus Bit Map data format can represent an 8 bit, 16 bit, 32 bit, or 64 bit value.

Example: The Bit Map value of the hexadecimal number 0x123456789ABCDEF0 using a BM64 format will read as follows:

<u>Holding Register</u>	<u>Value</u>
K (Hi Byte)	0x12
K (Lo Byte)	0x34
K+1 (Hi Byte)	0x56
K+1 (Lo Byte)	0x78
K+2 (Hi Byte)	0x9A
K+2 (Lo Byte)	0xBC
K+3 (Hi Byte)	0xDE
K+3 (Lo Byte)	0xF0

CRC Error Check

This field contains a two-byte CRC value for transmission error detection. The master first calculates the CRC and appends it to the query message. The BE1-951 recalculates the CRC value for the received query and performs a comparison to the query CRC value to determine if a transmission error has occurred. If so, no response message is generated. If no transmission error has occurred, the slave calculates a new CRC value for the response message and appends it to the message for transmission.

The CRC calculation is performed using all bytes of the device address, function code, and data block fields. A 16-bit CRC-register is initialized to all 1's. Then each eight-bit byte of the message is used in the following algorithm:

First, exclusive-OR the message byte with the low-order byte of the CRC-register. The result, stored in the CRC-register, will then be right-shifted eight times. The CRC-register MSB is zero-filled with each shift. After each shift, the CRC-register LSB is examined. If the LSB IS a 1, the CRC-register is then exclusive-ORed with the fixed polynomial value A001 (hex) prior to the next shift. Once all bytes of the message have undergone the above algorithm, the CRC-register will contain the message CRC value to be placed in the error check field.

Session Access Registers

The ACCESS REQUEST and the EXIT registers are used to access and release write privileges while changing relay settings, resetting report registers, or using control commands through the Modbus port. This feature is important because it prevents changes from being made concurrently from two areas. For example, a user cannot make changes from COM0 at the same time a remote user is making changes via Modbus from COM2.

Changing the settings through the Modbus port requires that the operator write to the ACCESS REQUEST register to obtain programming access. This must follow writing the ACCESS PASSWORD register(s) with a password to obtain access to change settings associated with the password. Different passwords give the ability or access to perform different operations. The relay will deny access if an invalid password is entered or if another user has already been granted programming access through another serial port or at the front panel. Only one user can have access at any one time.

If no password protection is used, it is still necessary to obtain access in order to protect against accidental changes. If password protection is disabled, then writing the ACCESS REQUEST register will be accepted in place of a password. The relay will transmit a valid response message if the access query was received and executed. The relay will respond with an error message if the access query could not be executed.

Changing settings through a Modbus communication port consists of the following sequence:

- Step 1. Preset Multiple Registers query to ACCESS PASSWORD register(s) to specify password.
- Step 2. Preset Multiple Registers query to ACCESS REQUEST register to access write privileges.
- Step 3. Preset Multiple Registers queries to change the current settings.
- Step 4. Preset Multiple Registers query to EXIT register to clear access and save.

Changes are not made to the working settings but to a scratch-pad copy of the settings. After the change(s) are made, the new data will be copied to the working settings and saved to non-volatile memory when the EXIT register is written with a 'Y'. It is important to make all changes to relay parameters before writing the EXIT register. This prevents a partial or incomplete protection scheme from being implemented.

Template Registers

The BE1-951 uses three templates. A template is a block of holding registers to which the user assigns one of a number of similar groups of parameters. Templates are used for settings groups, fault summaries, and report generation. Modbus Template Registers 40036 (Settings Group Selection), 40038 (Fault Number Selection), 40039 (Report Selection) and 40040 (Report Focus) DO NOT REQUIRE any Write Password Access level before they can be written to.

The BE1-951 has four settings groups. The GRP template is assigned the parameters of a settings group. Therefore, before reading or writing settings group values, a user must first specify which settings group is to be associated with the template. This is accomplished by writing the desired settings group number (0-3) into the SETTINGS GROUP SELECTION Template holding register.

The BE1-951 stores up to 12 faults. Each fault is accessed by its fault number, which ranges from 1 to 255. The FLT template is assigned the parameters of a particular fault occurrence. Therefore, before reading fault summary values, a user must first specify which fault number is to be associated with the template. This is accomplished by writing the desired fault number (1-255) into the FAULT SELECTION Template holding register.

The BE1-951 generates 10 ASCII reports. The RPT template is assigned the text of a report. Therefore, before reading report text, a user must first specify which report is to be associated with the template. This is accomplished by writing the desired report number into the REPORT SELECTION Template holding register along with the associated report identifier, if any, into the REPORT FOCUS Template holding register.

Fault Summary Registers

The user can enter any fault number (1 - 255) into the FAULT SELECTION Template holding register to associate summary parameters for that fault number with the FLT Template. The Fault Template Status register (47513) indicates whether that fault number specifies a recent fault (one of 12 stored faults). If so, the Fault Template Status register value is the fault number; otherwise, it is zero and all FLT template values will read zero.

The Fault Indicator register (47512) value is the fault number (1 - 255) of the most recent fault. The user may construct his front-end GUI to link this register value into the FAULT SELECTION Template holding register, thereby automatically associating the FLT template with the most recent fault occurrence.

Report Generation Registers

The BE1-951 generates numerous ASCII reports available via serial commands. Several of these reports are available intact via the Modbus communication port. The desired report is first specified by writing the REPORT SELECTION holding register. If the report requires a number to be specified, such as a fault number or number of events, that number is written into the REPORT FOCUS holding register. The report is then available via the RPT template. The report can be read from 1 to 125 registers at a time, with each register containing 2 ASCII characters of information. The report read queries could be interspersed among other query types. The RPT template is continually re-read until the report has completed. Once the report is complete, reading from the RPT template will continually return the ASCII character code of 127 ("7F" hexadecimal). The report cannot be re-read or another report read until the REPORT SELECTION holding register is re-written.

Contiguous Poll Block Registers

The user may allocate up to 125 holding registers to the Contiguous Poll Block (49875-999). This allocation allows dispersed registers that are frequently read to be polled via a single read query. A register is assigned to a position in the Poll Block by writing its address value into the corresponding position in the Contiguous Poll Block Assignments registers (40746-870). Writing a zero value leaves that Poll Block position unassigned. Once assignments are made, the values of the assigned registers may be read by polling the Contiguous Poll Block. Polling an unassigned position will return a value of zero.

For example, if you wanted to continuously monitor the Date (47364), Time (47365-66), Fault Indicator (47512) and Breaker Status (47388) Holding Registers, you would first configure the **Contiguous Poll**

Block Registers by writing the desired register address values 7364, 7365, 7366, 7512 and 7388 into the Contiguous Poll Block Assignment registers 40746 thru 40750, respectively. You may now begin monitoring the specified registers by reading the first 5 locations in the **Contiguous Poll Block; ie, reading register 49875 for the Date (as specified in it's corresponding assignment register 40746), reading register 49876 and 77 for the Time (as specified in their corresponding assignment registers 40747 and 48), reading register 49878 for the Fault Indicator (as specified in it's corresponding assignment register 40749), and reading register 49879 for the Breaker Status (as specified in its corresponding assignment register 40750).**

Exception Code Enhancement Registers

When a BE1-951 responds to a Preset Multiple Register query with an error response message, additional information detailing the cause of the error may be available in the ERROR DETAILS block of holding registers (49835-54). The information is in ASCII format and available by reading the message string from the ERROR DETAILS block. The message remains available until the next Preset Multiple Register query is executed unless that query is to the FAULT SELECTION Template holding register. Since this register can be written automatically and randomly in time, the ERROR DETAILS block will not be updated.

The ERROR DETAILS block will also contain the exit status following a Preset Multiple Register query to the EXIT (40001) register. You may clear the ERROR DETAILS message at any time without affecting system operation by sending a Preset Multiple Register query to any unassigned holding register.

SECTION 2 • REGISTER TABLE

Mapping BE1-951 Parameters into Modicon Holding Register Address Space

General

Parameters are mapped into the holding register address space (40001 - 49999) in blocks according to access type.

Any Holding Register not listed in the Register Table is an unassigned Holding Register. A value of zero always results when reading an unassigned Holding Register. Writes to unassigned Holding Registers are legal, but no action will be taken (the write is ignored).

Conventions

The Data Format column uses the following abbreviations.

- ASC(x) - ASCII string, where x = the maximum defined string length
- BM(x) - Bit-map, where x = the number of related bits
- FP - Floating point
- INT - Integer (16-bit integer)
- LI - Long Integer (32-bit integer)
- SI - Short Integer (8-bit integer)

The *Notes* column uses the following abbreviations:

- GRP - Group Template Member
- FLT - Fault Template Member
- RPT - Report Template Member
- NS - Not Supported
- TS - Time Stamp format: MSEC of the day (0 to 86,400,000 msec) and DAYs since 01/01/1984.
- PS - Effective only when the Password Security parameter is enabled. See REGISTER DETAILS for Password Security holding register 40989.
- PW - Effective for any communication port active with ASCII protocol and for the Modbus® port (COM 2) when Password Security is enabled.

Register Table - Ordered By Register Number

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
<u>Session Parameters</u>				
40001	Exit	R W	ASC(1)	PS
40002-05	Access Password	R W	ASC(8)	PS
40006	Access Request	R W	BM(16)	PS
<u>Template Parameters</u>				
40036	Settings Group Selection	R W	SI	
40038	Fault Selection	R W	SI	
40039	Report Selection	R W	SI	
40040	Report Focus	R W	INT	
<u>Global Parameters</u>				
40080-83	Global Password	R W	ASC(8)	PW
40084	Global Path	R W	BM(8)	PW
40085-88	Setting Password	R W	ASC(8)	PW
40089	Setting Path	R W	BM(8)	PW
40090-93	Control Password	R W	ASC(8)	PW
40094	Control Path	R W	BM(8)	PW
40095-98	Report Password	R W	ASC(8)	PW
40099	Report Path	R W	BM(8)	PW
<u>Control Parameters</u>				
40117	Select Group	R W	ASC(1)	
40118	Operate Group	R W	ASC(1)	
40119	Select Virtual Selector Switch 43	R W	ASC(1)	
40120	Operate Virtual Selector Switch 43	R W	ASC(1)	
40121	Select Virtual Selector Switch 143	R W	ASC(1)	
40122	Operate Virtual Selector Switch 143	R W	ASC(1)	
40123	Select Virtual Selector Switch 243	R W	ASC(1)	
40124	Operate Virtual Selector Switch 243	R W	ASC(1)	
40125	Select Virtual Selector Switch 343	R W	ASC(1)	
40126	Operate Virtual Selector Switch 343	R W	ASC(1)	
40135	Select 101 Virtual Breaker Control Switch	R W	ASC(1)	
40136	Operate 101 Virtual Breaker Control Switch	R W	ASC(1)	
40137	Select All Outputs	R W	ASC(1)	
40138	Operate All Outputs	R W	ASC(1)	
40139	Select Output A	R W	ASC(1)	
40140	Operate Output A	R W	ASC(1)	
40141	Select Output 1	R W	ASC(1)	
40142	Operate Output 1	R W	ASC(1)	
40143	Select Output 2	R W	ASC(1)	
40144	Operate Output 2	R W	ASC(1)	
40145	Select Output 3	R W	ASC(1)	
40146	Operate Output 3	R W	ASC(1)	
40147	Select Output 4	R W	ASC(1)	
40148	Operate Output 4	R W	ASC(1)	
40149	Select Output 5	R W	ASC(1)	
40150	Operate Output 5	R W	ASC(1)	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
<i>Group Setting Parameters</i>				
The following is the Group Template (GRP)				
40259-60	50TP Pickup	R W	FP	GRP
40261-62	50TP Time Delay	R W	LI	GRP
40263	50TP Directional Mode	R W	ASC(1)	GRP
40264-65	50TN Pickup	R W	FP	GRP
40266-67	50TN Time Delay	R W	LI	GRP
40268	50TN Directional Mode	R W	ASC(1)	GRP
40269-70	50TQ Pickup	R W	FP	GRP
40271-72	50TQ Time Delay	R W	LI	GRP
40273	50TQ Directional Mode	R W	ASC(1)	GRP
40274-75	150TP Pickup	R W	FP	GRP
40276-77	150TP Time Delay	R W	LI	GRP
40278	150TP Directional Mode	R W	ASC(1)	GRP
40279-80	150TN Pickup	R W	FP	GRP
40281-82	150TN Time Delay	R W	LI	GRP
40283	150TN Directional Mode	R W	ASC(1)	GRP
40284-85	150TQ Pickup	R W	FP	GRP
40286-87	150TQ Time Delay	R W	LI	GRP
40288	150TQ Directional Mode	R W	ASC(1)	GRP
40301-02	51P Pickup	R W	FP	GRP
40303-04	51P Time Dial	R W	FP	GRP
40305-06	51P Curve Type	R W	ASC(3)	GRP
40307	51P Directional Mode	R W	ASC(1)	GRP
40308-09	51N Pickup	R W	FP	GRP
40310-11	51N Time Dial	R W	FP	GRP
40312-13	51N Curve Type	R W	ASC(3)	GRP
40314	51N Directional Mode	R W	ASC(1)	GRP
40315-16	51Q Pickup	R W	FP	GRP
40317-18	51Q Time Dial	R W	FP	GRP
40319-20	51Q Curve Type	R W	ASC(3)	GRP
40321	51Q Directional Mode	R W	ASC(1)	GRP
40322-23	151N Pickup	R W	FP	GRP
40324-25	151N Time Dial	R W	FP	GRP
40326-27	151N Curve Type	R W	ASC(3)	GRP
40328	151N Directional Mode	R W	ASC(1)	GRP
40359-60	62 Time Delay 1	R W	LI	GRP
40361-62	62 Time Delay 2	R W	LI	GRP
40363-64	162 Time Delay 1	R W	LI	GRP
40365-66	162 Time Delay 2	R W	LI	GRP
40406-07	79 First Automatic Reclose Delay	R W	LI	GRP
40408-09	79 Second Automatic Reclose Delay	R W	LI	GRP
40410-11	79 Third Automatic Reclose Delay	R W	LI	GRP
40412-13	79 Fourth Automatic Reclose Delay	R W	LI	GRP

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
40414-15	79 Reset Time Delay	R W	LI	GRP
40416-17	79 Reclose Fail Time Delay	R W	LI	GRP
40418-19	79 Maximum Reclose Time	R W	LI	GRP
40420	79 Sequence Control	R W	BM(16)	GRP
40429-30	27R Pickup	R W	FP	GRP
40431	27R Control Mode	R W	ASC(1)	GRP
40432-33	47 Pickup	R W	FP	GRP
40434-35	47 Time Delay	R W	LI	GRP
40436-37	59 Pickup	R W	FP	GRP
40438-39	59 Time Delay	R W	LI	GRP
40440-41	59X Pickup	R W	FP	GRP
40442-43	59X Time Delay	R W	LI	GRP
40444-45	81 Pickup	R W	FP	GRP
40446-47	81 Time Delay	R W	LI	GRP
40448	81 Mode	R W	ASC(1)	GRP
40449-50	181 Pickup	R W	FP	GRP
40451-52	181 Time Delay	R W	LI	GRP
40453	181 Mode	R W	ASC(1)	GRP
40454-55	281 Pickup	R W	FP	GRP
40456-57	281 Time Delay	R W	LI	GRP
40458	281 Mode	R W	ASC(1)	GRP
40459-60	381 Pickup	R W	FP	GRP
40461-62	381 Time Delay	R W	LI	GRP
40463	381 Mode	R W	ASC(1)	GRP
40464-65	481 Pickup	R W	FP	GRP
40466-67	481 Time Delay	R W	LI	GRP
40468	481 Mode	R W	ASC(1)	GRP
40469-70	581 Pickup	R W	FP	GRP
40471-72	581 Time Delay	R W	LI	GRP
40473	581 Mode	R W	ASC(1)	GRP
40474-75	81 Inhibit Setting	R W	FP	GRP
40476-77	27P Pickup	R W	FP	GRP
40478-79	27P Time Delay	R W	LI	GRP
40480-81	27X Pickup	R W	FP	GRP
40482-83	27X Time Delay	R W	LI	GRP
40484-85	24 Pickup	R W	FP	GRP
40486-87	24 Time Delay	R W	FP	GRP
40488-89	24 Reset Delay	R W	FP	GRP
40490-91	25 Volts	R W	FP	GRP
40492-93	25 Angle	R W	FP	GRP
40494-95	25 Slip	R W	FP	GRP
40496	25 Mode	R W	INT	GRP

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
40497-98	25VM Live Volts	R W	FP	GRP
40499-500	25VM Dead Volts	R W	FP	GRP
40501-02	25VM Time Delay	R W	LI	GRP
40503-04	25VM Mode1	R W	ASC(3)	GRP
40505-06	25VM Mode2	R W	ASC(3)	GRP
40507-08	67 Neutral Polarizing Mode	R W	ASC(3)	GRP
40509-10	67 Neutral Polarizing Quantity	R W	ASC(4)	GRP
40511-12	32 Pickup	R W	FP	GRP
40513-14	32 Time Delay	R W	INT	GRP
40515	32 Mode	R W	ASC(1)	GRP
40516-17	159X Pickup	R W	FP	GRP
40518-19	159X Time Delay	R W	LI	GRP

Global Setting Parameters

40602-03	Power System Nominal Voltage	R W	FP	
40604-05	Power System Nominal Current	R W	FP	
40606-07	Breaker Fail Time Delay	R W	LI	
40608-09	Programmable 51 Curve Constant A	R W	FP	
40610-11	Programmable 51 Curve Constant B	R W	FP	
40612-13	Programmable 51 Curve Constant C	R W	FP	
40614-15	Programmable 51 Curve Constant N	R W	FP	
40616-17	Programmable 51 Curve Constant R	R W	FP	
40618	Input 1 Contact Recognition Time Delay	R W	SI	
40619	Input 1 Contact Debounce Time Delay	R W	SI	
40620	Input 2 Contact Recognition Time Delay	R W	SI	
40621	Input 2 Contact Debounce Time Delay	R W	SI	
40622	Input 3 Contact Recognition Time Delay	R W	SI	
40623	Input 3 Contact Debounce Time Delay	R W	SI	
40624	Input 4 Contact Recognition Time Delay	R W	SI	
40625	Input 4 Contact Debounce Time Delay	R W	SI	
40746-870	Contiguous Poll Block Assignments	R W	INT	
40871	Setting Group Control On Time	R W	INT	
40872	Setting Group 1 Automatic Control Switch Time	R W	SI	
40873	Setting Group 1 Automatic Control Switch Level	R W	SI	
40874	Setting Group 1 Automatic Control Time	R W	SI	
40875	Setting Group 1 Automatic Control Return Level	R W	SI	
40876	Setting Group 1 Tracking Element	R W	INT	
40877	Setting Group 2 Automatic Control Switch Time	R W	SI	
40878	Setting Group 2 Automatic Control Switch Level	R W	SI	
40879	Setting Group 2 Automatic Control Return Time	R W	SI	
40880	Setting Group 2 Automatic Control Return Level	R W	SI	
40881	Setting Group 2 Tracking Element	R W	INT	
40882	Setting Group 3 Automatic Control Switch Time	R W	SI	
40883	Setting Group 3 Automatic Control Switch Level	R W	SI	
40884	Setting Group 3 Automatic Control Return Time	R W	SI	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
40885	Setting Group 3 Automatic Control Return Level	R W	SI	
40886	Setting Group 3 Tracking Element	R W	INT	
40887-92	79 Zone Sequence Logic Mask	R W	BM(96)	
40895-900	79 Zone Sequence Logic Term	R W	BM(96)	
40903-04	60FL Loss of Potential Current Auto Block Setting	R W	ASC(3)	
40905-06	60FL Loss of Potential Voltage Auto Block Setting	R W	ASC(3)	

Serial Port Setting Parameters

40962	Serial Port 0 Baud Rate	R W	INT	
40964	Serial Port 0 Software Flow Control	R W	SI	
40965	Serial Port 0 Page Length	R W	SI	
40966	Serial Port 0 Acknowledgement Format	R W	SI	
40971	Serial Port 1 Baud Rate	R W	INT	
40972	Serial Port 1 Relay Address	R W	INT	
40973	Serial Port 1 Software Flow Control	R W	SI	
40974	Serial Port 1 Page Length	R W	SI	
40975	Serial Port 1 Acknowledgement Format	R W	SI	
40980	Serial Port 2 Baud Rate	R W	INT	
40981	Serial Port 2 Relay Address	R W	INT	
40986	Serial Port 2 Modbus Parity	R W	SI	
40987	Serial Port 2 Modbus Remote Delay	R W	SI	
40988	Serial Port 2 Modbus Stop Bits	R W	SI	
40989	Password Security	R W	SI	

System Data Setting Parameters

41018	System Frequency	R W	SI	
41019-20	Phase Rotation	R W	ASC(3)	
41021	Phase Ratio	R W	INT	
41022	Ground CT Ratio	R W	INT	
41033-34	Phase VT Ratio	R W	FP	
41035-36	27/59 Voltage Sensing Mode	R W	ASC(3)	
41037-38	51/27R Voltage Sensing Mode	R W	ASC(3)	
41039-40	VT Connection	RW	ASC(3)	
41041-42	Auxiliary VT Ratio	R W	FP	
41043-44	VT Auxiliary Connection	RW	ASC(3)	
41045	Load Profile Interval	R W	INT	
41046-47	Power Line - Z1 Impedance	R W	FP	
41048-49	Power Line - Z1 Angle	R W	FP	
410450-51	Power Line - Z0 Impedance	R W	FP	
41052-53	Power Line - Z0 Angle	R W	FP	
41054	Power Line - Line Length	R W	INT	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
<i><u>Breaker Duty Setting Parameters</u></i>				
41092	Breaker Duty Type	R W	SI	
41093-94	Maximum Breaker Duty	R W	FP	
41096	Programmable Breaker Alarm #1 Mode	R W	INT	
41097-98	Programmable Breaker Alarm #1 Limit	R W	FP	
41099	Programmable Breaker Alarm #2 Mode	R W	INT	
41100-01	Programmable Breaker Alarm #2 Limit	R W	FP	
41102	Programmable Breaker Alarm #3 Mode	R W	INT	
41103-04	Programmable Breaker Alarm #3 Limit	R W	FP	
41110-15	Breaker Block Logic Mask	R W	BM(96)	
41118-23	Breaker Block Logic Term	R W	BM(96)	
41126-31	Breaker Close Logic Mask	R W	BM(96)	
41134-39	Breaker Close Logic Term	R W	BM(96)	
<i><u>Relay Data Setting Parameters</u></i>				
41247	Volts / Hertz Alarm	R W	INT	
41251-52	Forward Var Demand Alarm	R W	FP	
41253-54	Reverse Var Demand Alarm	R W	FP	
41255-56	Forward Watt Demand Alarm	R W	FP	
41257-58	Reverse Watt Demand Alarm	R W	FP	
41259-60	Phase Demand Alarm Level	R W	FP	
41261-62	Neutral Demand Alarm Level	R W	FP	
41263-64	Negative Sequence Demand Alarm Level	R W	FP	
41265-66	Major Alarm Mask	R W	BM(32)	
41267-68	Minor Alarm Mask	R W	BM(32)	
41269-70	Logic Alarm Mask	R W	BM(32)	
41272	Clock Format - Date	R W	ASC(1)	
41273	Clock Format - Time	R W	SI	
41274	Clock Format - Daylight Savings	R W	SI	
41275	Phase Demand Interval	R W	SI	
41276	Neutral Demand Interval	R W	SI	
41277	Negative Sequence Demand Interval	R W	SI	
41284	Output Hold Mask	R W	BM(8)	
41287-90	Target Mask	R W	BM(64)	
41291-94	Programmable Screen #1	R W	ASC(7)	
41295-98	Programmable Screen #2	R W	ASC(7)	
41299-302	Programmable Screen #3	R W	ASC(7)	
41303-06	Programmable Screen #4	R W	ASC(7)	
41307-10	Programmable Screen #5	R W	ASC(7)	
41311-14	Programmable Screen #6	R W	ASC(7)	
41315-18	Programmable Screen #7	R W	ASC(7)	
41319-22	Programmable Screen #8	R W	ASC(7)	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
41323-26	Programmable Screen #9	R W	ASC(7)	
41327-30	Programmable Screen #10	R W	ASC(7)	
41331-34	Programmable Screen #11	R W	ASC(7)	
41335-38	Programmable Screen #12	R W	ASC(7)	
41339-42	Programmable Screen #13	R W	ASC(7)	
41343-46	Programmable Screen #14	R W	ASC(7)	
41347-50	Programmable Screen #15	R W	ASC(7)	
41351-54	Programmable Screen #16	R W	ASC(7)	
41355-60	Fault Record Trigger (Trip) Logic Mask	R W	BM(96)	
41363-68	Fault Record Trigger (Trip) Logic Term	R W	BM(96)	
41371-76	Fault Record Trigger (Pickup) Logic Mask	R W	BM(96)	
41379-84	Fault Record Trigger (Pickup) Logic Term	R W	BM(96)	
41387-92	Fault Record Trigger (Logic) Logic Mask	R W	BM(96)	
41395-400	Fault Record Trigger (Logic) Logic Term	R W	BM(96)	
41403-08	Reset Target Logic Mask	R W	BM(96)	
41411-16	Reset Target Logic Term	R W	BM(96)	
41419-24	Reset Alarm Logic Mask	R W	BM(96)	
41427-32	Reset Alarm Logic Term	R W	BM(96)	

Custom Logic Setting Parameters

41465-68	User Custom Logic Name	R W	ASC(8)	
41469-72	Current Active Logic Scheme	R –	ASC(8)	
41473-76	Custom Logic Name	R –	ASC(8)	
41477-80	Standard Logic #1 Name	R –	ASC(8)	
41481-84	Standard Logic #2 Name	R –	ASC(8)	
41485-88	Standard Logic #3 Name	R –	ASC(8)	
41489-92	Standard Logic #4 Name	R –	ASC(8)	
41493-96	Standard Logic #5 Name	R –	ASC(8)	
41497-500	Standard Logic #6 Name	R –	ASC(8)	
41501-04	Standard Logic #7 Name	R –	ASC(8)	
41505	Programmable 50TP Block Logic Mode	R W	INT	
41506-11	Programmable 50TP Block Logic Mask	R W	BM(96)	
41514-19	Programmable 50TP Block Logic Term	R W	BM(96)	
41522	Programmable 50TN Block Logic Mode	R W	INT	
41523-28	Programmable 50TN Block Logic Mask	R W	BM(96)	
41531-36	Programmable 50TN Block Logic Term	R W	BM(96)	
41539	Programmable 50TQ Block Logic Mode	R W	INT	
41540-45	Programmable 50TQ Block Logic Mask	R W	BM(96)	
41548-53	Programmable 50TQ Block Logic Term	R W	BM(96)	
41556	Programmable 150TP Block Logic Mode	R W	INT	
41557-62	Programmable 150TP Block Logic Mask	R W	BM(96)	
41565-70	Programmable 150TP Block Logic Term	R W	BM(96)	
41573	Programmable 150TN Block Logic Mode	R W	INT	
41574-79	Programmable 150TN Block Logic Mask	R W	BM(96)	
41582-87	Programmable 150TN Block Logic Term	R W	BM(96)	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
41590	Programmable 150TQ Block Logic Mode	R W	INT	
41591-96	Programmable 150TQ Block Logic Mask	R W	BM(96)	
41599-604	Programmable 150TQ Block Logic Term	R W	BM(96)	
41658	Programmable Breaker Fail Logic Mode	R W	INT	
41659-64	Programmable Breaker Fail Initiate Logic Mask	R W	BM(96)	
41667-72	Programmable Breaker Fail Initiate Logic Term	R W	BM(96)	
41675-80	Programmable Breaker Fail Block Logic Mask	R W	BM(96)	
41683-88	Programmable Breaker Fail Block Logic Term	R W	BM(96)	
41691	Programmable 51P Logic Mode	R W	INT	
41692-97	Programmable 51P Block Logic Mask	R W	BM(96)	
41700-05	Programmable 51P Block Logic Term	R W	BM(96)	
41708	Programmable 51N Logic Mode	R W	INT	
41709-14	Programmable 51N Block Logic Mask	R W	BM(96)	
41717-22	Programmable 51N Block Logic Term	R W	BM(96)	
41725	Programmable 51Q Logic Mode	R W	INT	
41726-31	Programmable 51Q Block Logic Mask	R W	BM(96)	
41734-39	Programmable 51Q Block Logic Term	R W	BM(96)	
41759	Programmable 151N Logic Mode	R W	INT	
41760-65	Programmable 151N Block Logic Mask	R W	BM(96)	
41768-73	Programmable 151N Block Logic Term	R W	BM(96)	
41776	Programmable 159X Logic Mode	R W	INT	
41777-82	Programmable 159X Block Logic Mask	R W	BM(96)	
41785-90	Programmable 159X Block Logic Term	R W	BM(96)	
41844	Programmable 62 Timer Logic Mode	R W	INT	
41845-50	Programmable 62 Timer Start Logic Mask	R W	BM(96)	
41853-58	Programmable 62 Timer Start Logic Term	R W	BM(96)	
41861-66	Programmable 62 Timer Block Logic Mask	R W	BM(96)	
41869-74	Programmable 62 Timer Block Logic Term	R W	BM(96)	
41877	Programmable 162 Timer Logic Mode	R W	INT	
41878-83	Programmable 162 Timer Start Logic Mask	R W	BM(96)	
41886-91	Programmable 162 Timer Start Logic Term	R W	BM(96)	
41894-99	Programmable 162 Timer Block Logic Mask	R W	BM(96)	
41902-07	Programmable 162 Timer Block Logic Term	R W	BM(96)	
41910	Programmable 27P Logic Mode	R W	INT	
41911-16	Programmable 27P Block Logic Mask	R W	BM(96)	
41919-24	Programmable 27P Block Logic Term	R W	BM(96)	
41927	Programmable 27X Logic Mode	R W	INT	
41928-33	Programmable 27X Block Logic Mask	R W	BM(96)	
41936-41	Programmable 27X Block Logic Term	R W	BM(96)	
41944	Programmable 59P Logic Mode	R W	INT	
41945-50	Programmable 59P Block Logic Mask	R W	BM(96)	
41953-58	Programmable 59P Block Logic Term	R W	BM(96)	
41961	Programmable 59X Logic Mode	R W	INT	
41962-67	Programmable 59X Block Logic Mask	R W	BM(96)	
41970-75	Programmable 59X Block Logic Term	R W	BM(96)	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
41978	Programmable 32 Logic Mode	R W	INT	
41979-84	Programmable 32 Block Logic Mask	R W	BM(96)	
41987-92	Programmable 32 Block Logic Term	R W	BM(96)	
42010	Programmable Settings GRP Logic Mode	R W	INT	
42011-16	Programmable Settings GRP Block Logic Mask	R W	BM(96)	
42019-24	Programmable Settings GRP Block Logic Term	R W	BM(96)	
42027-32	Programmable Settings GRP 0 Select Logic Mask	R W	BM(96)	
42035-40	Programmable Settings GRP 0 Select Logic Term	R W	BM(96)	
42043-48	Programmable Settings GRP 1 Select Logic Mask	R W	BM(96)	
42051-56	Programmable Settings GRP 1 Select Logic Term	R W	BM(96)	
42059-64	Programmable Settings GRP 2 Select Logic Mask	R W	BM(96)	
42067-72	Programmable Settings GRP 2 Select Logic Term	R W	BM(96)	
42075-80	Programmable Settings GRP 3 Select Logic Mask	R W	BM(96)	
42083-88	Programmable Settings GRP 3 Select Logic Term	R W	BM(96)	
42091	Programmable 43 Virtual Switch Logic Mode	R W	INT	
42092	Programmable 143 Virtual Switch Logic Mode	R W	INT	
42093	Programmable 243 Virtual Switch Logic Mode	R W	INT	
42094	Programmable 343 Virtual Switch Logic Mode	R W	INT	
42099	Programmable 101 Virtual BKR CNTRL Logic Mode	R W	INT	
42133	Programmable Virtual Output A Term Count	R W	SI	
42134-39	Programmable Virtual Output A Logic Mask 1	R W	BM(96)	
42142-47	Programmable Virtual Output A Logic Term 1	R W	BM(96)	
42150-55	Programmable Virtual Output A Logic Mask 2	R W	BM(96)	
42158-63	Programmable Virtual Output A Logic Term 2	R W	BM(96)	
42166-71	Programmable Virtual Output A Logic Mask 3	R W	BM(96)	
42174-79	Programmable Virtual Output A Logic Term 3	R W	BM(96)	
42182-87	Programmable Virtual Output A Logic Mask 4	R W	BM(96)	
42190-95	Programmable Virtual Output A Logic Term 4	R W	BM(96)	
42198	Programmable Virtual Output 1 Term Count	R W	SI	
42199-204	Programmable Virtual Output 1 Logic Mask 1	R W	BM(96)	
42207-12	Programmable Virtual Output 1 Logic Term 1	R W	BM(96)	
42215-20	Programmable Virtual Output 1 Logic Mask 2	R W	BM(96)	
42223-28	Programmable Virtual Output 1 Logic Term 2	R W	BM(96)	
42231-36	Programmable Virtual Output 1 Logic Mask 3	R W	BM(96)	
42239-44	Programmable Virtual Output 1 Logic Term 3	R W	BM(96)	
42247-52	Programmable Virtual Output 1 Logic Mask 4	R W	BM(96)	
42255-60	Programmable Virtual Output 1 Logic Term 4	R W	BM(96)	
42263	Programmable Virtual Output 2 Term Count	R W	SI	
42264-69	Programmable Virtual Output 2 Logic Mask 1	R W	BM(96)	
42272-77	Programmable Virtual Output 2 Logic Term 1	R W	BM(96)	
42280-85	Programmable Virtual Output 2 Logic Mask 2	R W	BM(96)	
42288-93	Programmable Virtual Output 2 Logic Term 2	R W	BM(96)	
42296-301	Programmable Virtual Output 2 Logic Mask 3	R W	BM(96)	
42304-09	Programmable Virtual Output 2 Logic Term 3	R W	BM(96)	
42312-17	Programmable Virtual Output 2 Logic Mask 4	R W	BM(96)	
42320-25	Programmable Virtual Output 2 Logic Term 4	R W	BM(96)	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
42328	Programmable Virtual Output 3 Term Count	R W	SI	
42329-34	Programmable Virtual Output 3 Logic Mask 1	R W	BM(96)	
42337-42	Programmable Virtual Output 3 Logic Term 1	R W	BM(96)	
42345-50	Programmable Virtual Output 3 Logic Mask 2	R W	BM(96)	
42353-58	Programmable Virtual Output 3 Logic Term 2	R W	BM(96)	
42361-66	Programmable Virtual Output 3 Logic Mask 3	R W	BM(96)	
42369-74	Programmable Virtual Output 3 Logic Term 3	R W	BM(96)	
42377-82	Programmable Virtual Output 3 Logic Mask 4	R W	BM(96)	
42385-90	Programmable Virtual Output 3 Logic Term 4	R W	BM(96)	
42393	Programmable Virtual Output 4 Term Count	R W	SI	
42394-99	Programmable Virtual Output 4 Logic Mask 1	R W	BM(96)	
42402-07	Programmable Virtual Output 4 Logic Term 1	R W	BM(96)	
42410-15	Programmable Virtual Output 4 Logic Mask 2	R W	BM(96)	
42418-23	Programmable Virtual Output 4 Logic Term 2	R W	BM(96)	
42426-31	Programmable Virtual Output 4 Logic Mask 3	R W	BM(96)	
42434-39	Programmable Virtual Output 4 Logic Term 3	R W	BM(96)	
42442-47	Programmable Virtual Output 4 Logic Mask 4	R W	BM(96)	
42450-55	Programmable Virtual Output 4 Logic Term 4	R W	BM(96)	
42458	Programmable Virtual Output 5 Term Count	R W	SI	
42459-64	Programmable Virtual Output 5 Logic Mask 1	R W	BM(96)	
42467-72	Programmable Virtual Output 5 Logic Term 1	R W	BM(96)	
42475-80	Programmable Virtual Output 5 Logic Mask 2	R W	BM(96)	
42483-88	Programmable Virtual Output 5 Logic Term 2	R W	BM(96)	
42491-96	Programmable Virtual Output 5 Logic Mask 3	R W	BM(96)	
42499-504	Programmable Virtual Output 5 Logic Term 3	R W	BM(96)	
42507-12	Programmable Virtual Output 5 Logic Mask 4	R W	BM(96)	
42515-20	Programmable Virtual Output 5 Logic Term 4	R W	BM(96)	
42523	Programmable Virtual Output 6 Term Count	R W	SI	
42524-29	Programmable Virtual Output 6 Logic Mask 1	R W	BM(96)	
42532-37	Programmable Virtual Output 6 Logic Term 1	R W	BM(96)	
42540-45	Programmable Virtual Output 6 Logic Mask 2	R W	BM(96)	
42548-53	Programmable Virtual Output 6 Logic Term 2	R W	BM(96)	
42556-61	Programmable Virtual Output 6 Logic Mask 3	R W	BM(96)	
42564-69	Programmable Virtual Output 6 Logic Term 3	R W	BM(96)	
42572-77	Programmable Virtual Output 6 Logic Mask 4	R W	BM(96)	
42580-85	Programmable Virtual Output 6 Logic Term 4	R W	BM(96)	
42588	Programmable Virtual Output 7 Term Count	R W	SI	
42589-94	Programmable Virtual Output 7 Logic Mask 1	R W	BM(96)	
42597-602	Programmable Virtual Output 7 Logic Term 1	R W	BM(96)	
42605-10	Programmable Virtual Output 7 Logic Mask 2	R W	BM(96)	
42613-18	Programmable Virtual Output 7 Logic Term 2	R W	BM(96)	
42621-26	Programmable Virtual Output 7 Logic Mask 3	R W	BM(96)	
42629-34	Programmable Virtual Output 7 Logic Term 3	R W	BM(96)	
42637-42	Programmable Virtual Output 7 Logic Mask 4	R W	BM(96)	
42645-50	Programmable Virtual Output 7 Logic Term 4	R W	BM(96)	
42653	Programmable Virtual Output 8 Term Count	R W	SI	
42654-59	Programmable Virtual Output 8 Logic Mask 1	R W	BM(96)	
42662-67	Programmable Virtual Output 8 Logic Term 1	R W	BM(96)	
42670-75	Programmable Virtual Output 8 Logic Mask 2	R W	BM(96)	
42678-83	Programmable Virtual Output 8 Logic Term 2	R W	BM(96)	
42686-91	Programmable Virtual Output 8 Logic Mask 3	R W	BM(96)	
42694-99	Programmable Virtual Output 8 Logic Term 3	R W	BM(96)	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
42702-07	Programmable Virtual Output 8 Logic Mask 4	R W	BM(96)	
42710-15	Programmable Virtual Output 8 Logic Term 4	R W	BM(96)	
42718	Programmable Virtual Output 9 Term Count	R W	SI	
42719-24	Programmable Virtual Output 9 Logic Mask 1	R W	BM(96)	
42727-32	Programmable Virtual Output 9 Logic Term 1	R W	BM(96)	
42735-40	Programmable Virtual Output 9 Logic Mask 2	R W	BM(96)	
42743-48	Programmable Virtual Output 9 Logic Term 2	R W	BM(96)	
42751-56	Programmable Virtual Output 9 Logic Mask 3	R W	BM(96)	
42759-64	Programmable Virtual Output 9 Logic Term 3	R W	BM(96)	
42767-72	Programmable Virtual Output 9 Logic Mask 4	R W	BM(96)	
42775-80	Programmable Virtual Output 9 Logic Term 4	R W	BM(96)	
42783	Programmable Virtual Output 10 Term Count	R W	SI	
42784-89	Programmable Virtual Output 10 Logic Mask 1	R W	BM(96)	
42792-97	Programmable Virtual Output 10 Logic Term 1	R W	BM(96)	
42800-05	Programmable Virtual Output 10 Logic Mask 2	R W	BM(96)	
42808-13	Programmable Virtual Output 10 Logic Term 2	R W	BM(96)	
42816-21	Programmable Virtual Output 10 Logic Mask 3	R W	BM(96)	
42824-29	Programmable Virtual Output 10 Logic Term 3	R W	BM(96)	
42832-37	Programmable Virtual Output 10 Logic Mask 4	R W	BM(96)	
42840-45	Programmable Virtual Output 10 Logic Term 4	R W	BM(96)	
42848	Programmable Virtual Output 11 Term Count	R W	SI	
42849-54	Programmable Virtual Output 11 Logic Mask 1	R W	BM(96)	
42857-62	Programmable Virtual Output 11 Logic Term 1	R W	BM(96)	
42865-70	Programmable Virtual Output 11 Logic Mask 2	R W	BM(96)	
42873-78	Programmable Virtual Output 11 Logic Term 2	R W	BM(96)	
42881-86	Programmable Virtual Output 11 Logic Mask 3	R W	BM(96)	
42889-94	Programmable Virtual Output 11 Logic Term 3	R W	BM(96)	
42897-902	Programmable Virtual Output 11 Logic Mask 4	R W	BM(96)	
42905-10	Programmable Virtual Output 11 Logic Term 4	R W	BM(96)	
42913	Programmable Virtual Output 12 Term Count	R W	SI	
42914-19	Programmable Virtual Output 12 Logic Mask 1	R W	BM(96)	
42922-27	Programmable Virtual Output 12 Logic Term 1	R W	BM(96)	
42930-35	Programmable Virtual Output 12 Logic Mask 2	R W	BM(96)	
42938-43	Programmable Virtual Output 12 Logic Term 2	R W	BM(96)	
42946-51	Programmable Virtual Output 12 Logic Mask 3	R W	BM(96)	
42954-59	Programmable Virtual Output 12 Logic Term 3	R W	BM(96)	
42962-67	Programmable Virtual Output 12 Logic Mask 4	R W	BM(96)	
42970-75	Programmable Virtual Output 12 Logic Term 4	R W	BM(96)	
42978	Programmable Virtual Output 13 Term Count	R W	SI	
42979-84	Programmable Virtual Output 13 Logic Mask 1	R W	BM(96)	
42987-92	Programmable Virtual Output 13 Logic Term 1	R W	BM(96)	
42995-3000	Programmable Virtual Output 13 Logic Mask 2	R W	BM(96)	
43003-08	Programmable Virtual Output 13 Logic Term 2	R W	BM(96)	
43011-16	Programmable Virtual Output 13 Logic Mask 3	R W	BM(96)	
43019-24	Programmable Virtual Output 13 Logic Term 3	R W	BM(96)	
43027-32	Programmable Virtual Output 13 Logic Mask 4	R W	BM(96)	
43035-40	Programmable Virtual Output 13 Logic Term 4	R W	BM(96)	
43043	Programmable Virtual Output 14 Term Count	R W	SI	
43044-49	Programmable Virtual Output 14 Logic Mask 1	R W	BM(96)	
43052-57	Programmable Virtual Output 14 Logic Term 1	R W	BM(96)	
43060-65	Programmable Virtual Output 14 Logic Mask 2	R W	BM(96)	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
43068-73	Programmable Virtual Output 14 Logic Term 2	R W	BM(96)	
43076-81	Programmable Virtual Output 14 Logic Mask 3	R W	BM(96)	
43084-89	Programmable Virtual Output 14 Logic Term 3	R W	BM(96)	
43092-97	Programmable Virtual Output 14 Logic Mask 4	R W	BM(96)	
43100-05	Programmable Virtual Output 14 Logic Term 4	R W	BM(96)	
43108	Programmable Virtual Output 15 Term Count	R W	SI	
43109-14	Programmable Virtual Output 15 Logic Mask 1	R W	BM(96)	
43117-22	Programmable Virtual Output 15 Logic Term 1	R W	BM(96)	
43125-30	Programmable Virtual Output 15 Logic Mask 2	R W	BM(96)	
43133-38	Programmable Virtual Output 15 Logic Term 2	R W	BM(96)	
43141-46	Programmable Virtual Output 15 Logic Mask 3	R W	BM(96)	
43149-54	Programmable Virtual Output 15 Logic Term 3	R W	BM(96)	
43157-62	Programmable Virtual Output 15 Logic Mask 4	R W	BM(96)	
43165-70	Programmable Virtual Output 15 Logic Term 4	R W	BM(96)	
43173	Programmable 79 Logic Mode	R W	INT	
43174-79	Programmable Reclose Initiate Logic Mask	R W	BM(96)	
43182-87	Programmable Reclose Initiate Logic Term	R W	BM(96)	
43190-95	Programmable Reclose Status Logic Mask	R W	BM(96)	
43198-203	Programmable Reclose Status Logic Term	R W	BM(96)	
43206-11	Programmable Reclose Wait Logic Mask	R W	BM(96)	
43214-19	Programmable Reclose Wait Logic Term	R W	BM(96)	
43222-27	Programmable Reclose DTL Logic Mask	R W	BM(96)	
43230-35	Programmable Reclose DTL Logic Term	R W	BM(96)	
43236	Programmable 81 Logic Mode	R W	INT	
43237-42	Programmable 81 Block Logic Mask	R W	BM(96)	
43245-50	Programmable 81 Block Logic Term	R W	BM(96)	
43253	Programmable 181 Logic Mode	R W	INT	
43254-59	Programmable 181 Block Logic Mask	R W	BM(96)	
43262-67	Programmable 181 Block Logic Term	R W	BM(96)	
43270	Programmable 281 Logic Mode	R W	INT	
43271-76	Programmable 281 Block Logic Mask	R W	BM(96)	
43279-84	Programmable 281 Block Logic Term	R W	BM(96)	
43287	Programmable 381 Logic Mode	R W	INT	
43288-93	Programmable 381 Block Logic Mask	R W	BM(96)	
43296-301	Programmable 381 Block Logic Term	R W	BM(96)	
43304	Programmable 481 Logic Mode	R W	INT	
43305-10	Programmable 481 Block Logic Mask	R W	BM(96)	
43313-18	Programmable 481 Block Logic Term	R W	BM(96)	
43321	Programmable 581 Logic Mode	R W	INT	
43322-27	Programmable 581 Block Logic Mask	R W	BM(96)	
43330-35	Programmable 581 Block Logic Term	R W	BM(96)	
43338	Programmable 47 Logic Mode	R W	INT	
43339-44	Programmable 47 Block Logic Mask	R W	BM(96)	
43347-52	Programmable 47 Block Logic Term	R W	BM(96)	
43355	Programmable 24 Logic Mode	R W	INT	
43356-61	Programmable 24 Block Logic Mask	R W	BM(96)	
43364-69	Programmable 24 Block Logic Term	R W	BM(96)	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
43372	Programmable 25 Logic Mode	R W	INT	
43373-78	Programmable 25 Block Logic Mask	R W	BM(96)	
43381-86	Programmable 25 Block Logic Term	R W	BM(96)	
<u><i>System Labels and Id Setting Parameters</i></u>				
43438-42	Relay ID	R W	ASC(10)	
43443-57	Station ID	R W	ASC(30)	
43498-502	Virtual Selector Switch 43 - Name Label	R W	ASC(10)	
43503-06	Virtual Selector Switch 43 - True Label	R W	ASC(7)	
43507-10	Virtual Selector Switch 43 - False Label	R W	ASC(7)	
43511-15	Virtual Selector Switch 143 - Name Label	R W	ASC(10)	
43516-19	Virtual Selector Switch 143 - True Label	R W	ASC(7)	
43520-23	Virtual Selector Switch 143 - False Label	R W	ASC(7)	
43524-28	Virtual Selector Switch 243 - Name Label	R W	ASC(10)	
43529-32	Virtual Selector Switch 243 - True Label	R W	ASC(7)	
43533-36	Virtual Selector Switch 243 - False Label	R W	ASC(7)	
43537-41	Virtual Selector Switch 343 - Name Label	R W	ASC(10)	
43542-45	Virtual Selector Switch 343 - True Label	R W	ASC(7)	
43546-49	Virtual Selector Switch 343 - False Label	R W	ASC(7)	
43602-06	Virtual Output A - Name Label	R W	ASC(10)	
43607-10	Virtual Output A - True Label	R W	ASC(7)	
43611-14	Virtual Output A - False Label	R W	ASC(7)	
43615-19	Virtual Output 1 - Name Label	R W	ASC(10)	
43620-23	Virtual Output 1 - True Label	R W	ASC(7)	
43624-27	Virtual Output 1 - False Label	R W	ASC(7)	
43628-32	Virtual Output 2 - Name Label	R W	ASC(10))	
43633-36	Virtual Output 2 - True Label	R W	ASC(7)	
43637-40	Virtual Output 2 - False Label	R W	ASC(7)	
43641-45	Virtual Output 3 - Name Label	R W	ASC(10)	
43646-49	Virtual Output 3 - True Label	R W	ASC(7)	
43650-53	Virtual Output 3 - False Label	R W	ASC(7)	
43654-58	Virtual Output 4 - Name Label	R W	ASC(10)	
43659-62	Virtual Output 4 - True Label	R W	ASC(7)	
43663-66	Virtual Output 4 - False Label	R W	ASC(7)	
43667-71	Virtual Output 5 - Name Label	R W	ASC(10)	
43672-75	Virtual Output 5 - True Label	R W	ASC(7)	
43676-79	Virtual Output 5 - False Label	R W	ASC(7)	
43680-84	Virtual Output 6 - Name Label	R W	ASC(10)	
43685-88	Virtual Output 6 - True Label	R W	ASC(7)	
43689-92	Virtual Output 6 - False Label	R W	ASC(7)	
43693-97	Virtual Output 7 - Name Label	R W	ASC(10)	
43698-701	Virtual Output 7 - True Label	R W	ASC(7)	
43702-05	Virtual Output 7 - False Label	R W	ASC(7)	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
43706-10	Virtual Output 8 - Name Label	R W	ASC(10)	
43711-14	Virtual Output 8 - True Label	R W	ASC(7)	
43715-18	Virtual Output 8 - False Label	R W	ASC(7)	
43719-23	Virtual Output 9 - Name Label	R W	ASC(10)	
43724-27	Virtual Output 9 - True Label	R W	ASC(7)	
43728-31	Virtual Output 9 - False Label	R W	ASC(7)	
43732-36	Virtual Output 10 - Name Label	R W	ASC(10)	
43737-40	Virtual Output 10 - True Label	R W	ASC(7)	
43741-44	Virtual Output 10 - False Label	R W	ASC(7)	
43745-49	Virtual Output 11 - Name Label	R W	ASC(10)	
43750-53	Virtual Output 11 - True Label	R W	ASC(7)	
43754-57	Virtual Output 11 - False Label	R W	ASC(7)	
43758-62	Virtual Output 12 - Name Label	R W	ASC(10)	
43763-66	Virtual Output 12 - True Label	R W	ASC(7)	
43767-70	Virtual Output 12 - False Label	R W	ASC(7)	
43771-75	Virtual Output 13 - Name Label	R W	ASC(10)	
43776-79	Virtual Output 13 - True Label	R W	ASC(7)	
43780-83	Virtual Output 13 - False Label	R W	ASC(7)	
43784-88	Virtual Output 14 - Name Label	R W	ASC(10)	
43789-92	Virtual Output 14 - True Label	R W	ASC(7)	
43793-96	Virtual Output 14 - False Label	R W	ASC(7)	
43797-801	Virtual Output 15 - Name Label	R W	ASC(10)	
43802-05	Virtual Output 15 - True Label	R W	ASC(7)	
43806-09	Virtual Output 15 - False Label	R W	ASC(7)	
43849-53	Input 1 - Name Label	R W	ASC(10)	
43854-57	Input 1 - True Label	R W	ASC(7)	
43858-61	Input 1 - False Label	R W	ASC(7)	
43862-66	Input 2 - Name Label	R W	ASC(10)	
43867-70	Input 2 - True Label	R W	ASC(7)	
43871-74	Input 2 - False Label	R W	ASC(7)	
43875-79	Input 3 - Name Label	R W	ASC(10)	
43880-83	Input 3 - True Label	R W	ASC(7)	
43884-87	Input 3 - False Label	R W	ASC(7)	
43888-92	Input 4 - Name Label	R W	ASC(10)	
43893-96	Input 4 - True Label	R W	ASC(7)	
43897-900	Input 4 - False Label	R W	ASC(7)	
<u>Report Parameters</u>				
47194-95	Peak Demand Vars	R W	FP	
47196	Peak Demand Vars Timestamp - Day	R –	INT	TS
47197-98	Peak Demand Vars Timestamp - ms	R –	LI	TS
47199-200	Peak Demand Reverse Vars	R W	FP	
47201	Peak Demand Reverse Vars Timestamp - Day	R –	INT	TS
47202-03	Peak Demand Reverse Vars Timestamp - ms	R –	LI	TS

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
47204-05	Peak Demand Watts	R W	FP	
47206	Peak Demand Watts Timestamp - Day	R –	INT	TS
47207-08	Peak Demand Watts Timestamp - ms	R –	LI	TS
47209-10	Peak Demand Reverse Watts	R W	FP	
47211	Peak Demand Reverse Watts Timestamp - Day	R –	INT	TS
47212-13	Peak Demand Reverse Watts Timestamp - ms	R –	LI	TS
47214-15	Today's Demand Vars	R –	FP	
47216	Today's Demand Vars Timestamp - Day	R –	INT	TS
47217-18	Today's Demand Vars Timestamp - ms	R –	LI	TS
47219-220	Today's Demand Reverse Vars	R –	FP	
47221	Today's Demand Reverse Vars Timestamp - Day	R –	INT	TS
47222-223	Today's Demand Reverse Vars Timestamp - ms	R –	LI	TS
47224-25	Today's Demand Watts	R –	FP	
47226	Today's Demand Watts Timestamp - Day	R –	INT	TS
47227-28	Today's Demand Watts Timestamp - ms	R –	LI	TS
47229-30	Today's Demand Reverse Watts	R –	FP	
47231	Today's Demand Reverse Watts Timestamp - Day	R –	INT	TS
47232-33	Today's Demand Reverse Watts Timestamp - ms	R –	LI	TS
47234-35	Yesterday's Demand Vars	R –	FP	
47236	Yesterday's Demand Vars Timestamp - Day	R –	INT	TS
47237-38	Yesterday's Demand Vars Timestamp - ms	R –	LI	TS
47239-40	Yesterday's Demand Reverse Vars	R –	FP	
47241	Yesterday's Demand Reverse Vars Timestamp - Day	R –	INT	TS
47242-43	Yesterday's Demand Reverse Vars Timestamp - ms	R –	LI	TS
47244-45	Yesterday's Demand Watts	R –	FP	
47246	Yesterday's Demand Watts Timestamp - Day	R –	INT	TS
47247-48	Yesterday's Demand Watts Timestamp - ms	R –	LI	TS
47249-50	Yesterday's Demand Reverse Watts	R –	FP	
47251	Yesterday's Demand Reverse Watts Timestamp - Day	R –	INT	TS
47252-53	Yesterday's Demand Reverse Watts Timestamp - ms	R –	LI	TS
47254-55	3 Phase Var Hours	R –	FP	
47256-57	3 Phase Reverse Var Hours	R –	FP	
47258-59	3 Phase Watt Hours	R –	FP	
47260-61	3 Phase Reverse Watt Hours	R –	FP	
47274-78	Model Number	R –	ASC(10)	
47282-89	Application SW Version # / Date	R –	ASC(16)	
47296-302	Boot SW Version # / Date	R –	ASC(14)	
47310-16	Serial Number	R –	ASC(13)	
47324-34	Style Number	R –	ASC(21)	
47362	COM1 Serial Port Relay Address	R W	INT	

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
47363	COM2 Serial Port Relay Address	R W	INT	
47364	Date and Time - Day	R W	INT	TS
47365-66	Date and Time - ms	R W	LI	TS
47367-72	System Status	R –	BM(96)	
47373	Current Active Group Setting	R –	SI	
47374	Current Group Control Setting	R –	ASC(1)	
47375-76	Current Output Control Settings (OutputPulse)	R –	BM(32)	
47377-78	Current Output Control Settings (OutputLatch)	R –	BM(32)	
47379	Current Output Contact Status	R –	BM(16)	
47380-81	Active Alarm Flags (SumFlags)	R –	BM(32)	
47382-83	Active Alarm Flags (ProgAlarms)	R –	BM(32)	
47384-87	Target Status	R W	BM(64)	
47388	Current Breaker Status	R –	ASC(1)	
47389-92	Current Active Logic	R –	ASC(8)	
47394-95	Breaker Contact Duty Log - Phase A	R W	FP	
47396-97	Breaker Contact Duty Log - Phase B	R W	FP	
47398-99	Breaker Contact Duty Log - Phase C	R W	FP	
47400-01	Breaker Operation Counter	R W	LI	
47410-11	Yesterday's Peak Demand Current - Phase A	R –	FP	
47412	Yesterday's Peak Demand Timestamp - Day	R –	INT	TS
47413-14	Yesterday's Peak Demand Timestamp - ms	R –	LI	TS
47415-16	Yesterday's Peak Demand Current - Phase B	R –	FP	
47417	Yesterday's Peak Demand Timestamp - Day	R –	INT	TS
47418-19	Yesterday's Peak Demand Timestamp - ms	R –	LI	TS
47420-21	Yesterday's Peak Demand Current - Phase C	R –	FP	
47422	Yesterday's Peak Demand Timestamp - Day	R –	INT	TS
47423-24	Yesterday's Peak Demand Timestamp - ms	R –	LI	TS
47425-26	Yesterday's Peak Demand Current - Neutral	R –	FP	
47427	Yesterday's Peak Demand Timestamp - Day	R –	INT	TS
47428-29	Yesterday's Peak Demand Timestamp - ms	R –	LI	TS
47430-31	Yesterday's Peak Demand Current - Negative Seq	R –	FP	
47432	Yesterday's Peak Demand Timestamp - Day	R –	INT	TS
47433-34	Yesterday's Peak Demand Timestamp - ms	R –	LI	TS
47435-36	Today's Peak Demand Current - Phase A	R –	FP	
47437	Today's Peak Demand Timestamp - Day	R –	INT	TS
47438-39	Today's Peak Demand Timestamp - ms	R –	LI	TS
47440-41	Today's Peak Demand Current - Phase B	R –	FP	
47442	Today's Peak Demand Timestamp - Day	R –	INT	TS
47443-44	Today's Peak Demand Timestamp - ms	R –	LI	TS
47445-46	Today's Peak Demand Current - Phase C	R –	FP	
47447	Today's Peak Demand Timestamp - Day	R –	INT	TS
47448-49	Today's Peak Demand Timestamp - ms	R –	LI	TS

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
47450-51	Today's Peak Demand Current - Neutral	R –	FP	
47452	Today's Peak Demand Timestamp - Day	R –	INT	TS
47453-54	Today's Peak Demand Timestamp - ms	R –	LI	TS
47455-56	Today's Peak Demand Current - Negative Seq	R –	FP	
47457	Today's Peak Demand Timestamp - Day	R –	INT	TS
47458-59	Today's Peak Demand Timestamp - ms	R –	LI	TS
47460-61	Peak Demand Current Since Reset - Phase A	R W	FP	
47462	Peak Demand Since Reset Timestamp - Day	R –	INT	TS
47463-64	Peak Demand Since Reset Timestamp - ms	R –	LI	TS
47465-66	Peak Demand Current Since Reset - Phase B	R W	FP	
47467	Peak Demand Since Reset Timestamp - Day	R –	INT	TS
47468-69	Peak Demand Since Reset Timestamp - ms	R –	LI	TS
47470-71	Peak Demand Current Since Reset - Phase C	R W	FP	
47472	Peak Demand Since Reset Timestamp - Day	R –	INT	TS
47473-74	Peak Demand Since Reset Timestamp - ms	R –	LI	TS
47475-76	Peak Demand Current Since Reset - Neutral	R W	FP	
47477	Peak Demand Since Reset Timestamp - Day	R –	INT	TS
47478-79	Peak Demand Since Reset Timestamp - ms	R –	LI	TS
47480-81	Peak Demand Current Since Reset - Neg Seq	R W	FP	
47482	Peak Demand Since Reset Timestamp - Day	R –	INT	TS
47483-84	Peak Demand Since Reset Timestamp - ms	R –	LI	TS
47486	Reset Logic Alarm Information	R W	SI	
47487	Reset Major Alarm Information	R W	SI	
47488	Reset Minor Alarm Information	R W	SI	
47489	Reset Relay Alarm Information	R W	SI	
47490	Reset Load Profile	R W	SI	
47491	Clear Fault Log	R W	SI	
47492	Trigger Fault Record	R W	SI	
47493	Clear Events Report	R W	SI	
47512	Fault Indicator	R –	SI	
47513	Fault Template Status	R –	SI	
Fault Template (FLT)				
47514	Fault Date and Time - Day	R –	INT	FLT, TS
47515-16	Fault Date and Time - Milliseconds	R –	LI	FLT, TS
47517	Fault Event Type	R –	BM(16)	FLT
47518	Fault Active Group	R –	SI	FLT
47519-22	Fault Targets	R –	BM(64)	FLT
47524	Fault Clearing Time Status	R –	SI	FLT
47526-26	Fault Clearing Time	R –	FP	FLT
47527	Fault Breaker Operate Time Status	R –	SI	FLT
47528-29	Fault Breaker Operate Time	R –	FP	FLT
47530-31	Fault Phase A Current Magnitude	R –	FP	FLT
47533-34	Fault Phase B Current Magnitude	R –	FP	FLT
47536-37	Fault Phase C Current Magnitude	R –	FP	FLT
47539-40	Fault Ground Current Magnitude	R –	FP	FLT
47542-43	Fault IQ Current Magnitude	R –	FP	FLT

Holding Register	Parameter	Read/Write Supported	Data Format	Notes
47544-45	Fault Phase A Voltage Magnitude	R –	FP	FLT
47546-47	Fault Phase B Voltage Magnitude	R –	FP	FLT
47548-49	Fault Phase C Voltage Magnitude	R –	FP	FLT
47550-51	Fault Vx Voltage Magnitude	R –	FP	FLT
47554-55	Fault Distance to Fault	R –	FP	FLT
47556-57	Fault Generator Frequency	R –	FP	FLT
47558-59	Fault Bus Frequency	R –	FP	FLT

Report Template (RPT)

47595-719	Report Text	R –	ASC(250)	RPT
-----------	-------------	-----	----------	-----

Metering Parameters

49719	Part Number	R –	INT	
49720-21	Generator Frequency	R –	FP	
49722-23	Bus Frequency	R –	FP	
49724-25	Slip Frequency	R –	FP	
49726-27	Phase A Current Magnitude	R –	FP	
49729-30	Phase B Current Magnitude	R –	FP	
49732-33	Phase C Current Magnitude	R –	FP	
49738-39	Negative Sequence Current Magnitude	R –	FP	
49740-41	Neutral Current Magnitude	R –	FP	
49742-43	Zero Sequence Voltage	R –	FP	
49744-45	Ground Current Magnitude	R –	FP	
49746-47	3 Phase Watts	R –	FP	
49748-49	3 Phase Power Factor	R –	FP	
49750-51	3 Phase Vars	R –	FP	
49752-53	3 Phase VA	R –	FP	
49754-55	Negative Sequence Voltage	R –	FP	
49756-57	Phase A Voltage	R –	FP	
49758-59	Phase B Voltage	R –	FP	
49760-61	Phase C Voltage	R –	FP	
49762-63	Phase A-B Voltage	R –	FP	
49764-65	Phase B-C Voltage	R –	FP	
49766-67	Phase C-A Voltage	R –	FP	
49768-69	V3x Voltage	R –	FP	
49770-71	Bus Voltage	R –	FP	
49772-73	Slip Angle	R –	FP	
49774-75	Phase A Watts	R –	FP	
49776-77	Phase B Watts	R –	FP	
49778-79	Phase C Watts	R –	FP	
49780-81	Phase A Vars	R –	FP	
49782-83	Phase B Vars	R –	FP	
49784-85	Phase C Vars	R –	FP	
49835-54	Error Details	R –	ASC(40)	
49875-999	Contiguous Poll Block	R –	Mixed	



SECTION 3 • REGISTER DETAILS

TABLE OF CONTENTS

SECTION 3 • REGISTER DETAILS.....	3-1
Introduction	3-1
Logic settings	3-1
Logic Modes	3-1
Global Parameters	3-6
Control Parameters	3-6
Group Setting Parameters.....	3-9
Global Setting Parameters	3-12
Serial Port Setting Parameters.....	3-13
System Data Setting Parameters	3-14
Breaker Duty Setting Parameters	3-15
Relay Data Setting Parameters.....	3-16
Custom Logic Setting Parameters	3-19
System Labels and ID Setting Parameters	3-19
Report Parameters	3-19
Metering Parameters.....	3-30
Tables	
Table 3-1. Report.....	3-5



SECTION 3 • REGISTER DETAILS

Introduction

This section details the register formats and data ranges of the previous section. The two sections combined provide all information necessary to communicate with the BE1-951 Modbus® Holding Registers.

Any Holding Register not listed in the Register Table is an unassigned Holding Register. A value of zero always results when reading an unassigned Holding Register. Writes to unassigned Holding Registers are legal, but no action will be taken (the write is ignored).

Logic settings

Logic settings consist of a combination of modes, masks, terms, and term counts. Logic modes are specific to each logic set, while the masks, terms, and term counts have value definitions consistent throughout all logic sets. A single logic equation consists of a “mask” and “term” pair. The logic “term count” is used only in VOA, VO1-VO15 virtual output logic blocks.

The logic “mode” enables or disables the logic equation for that logic block.

The logic “mask” corresponds to the SystemStatus bits to be evaluated. These bits are referenced in the desired logic equation and are set to 1 (non-used bits masked out as 0’s).

The logic “term” corresponds to the SystemStatus bit’s TRUE or FALSE state, referenced in the desired logic equation where only the TRUE bits in the equation are set to 1.

The logic “term count” may be of one of four logic types which are NONE (logic disabled), OR only (a + b + c), AND only (a*b*c) or MIXED (a*b + b*c).

The following defines all logic set parameters.

Logic Modes

41505	Programmable 50TP Block Logic Mode	INT
41522	Programmable 50TN Block Logic Mode	INT
41539	Programmable 50TQ Block Logic Mode	INT
41556	Programmable 150TP Block Logic Mode	INT
41573	Programmable 150TN Block Logic Mode	INT
41590	Programmable 150TQ Block Logic Mode	INT
	Read and Write:	
	0 for disabled	
	1 for enabled	
41658	Programmable Breaker Fail Logic Mode	INT
	Read and Write:	
	0 for disabled	
	1 for enabled	
41691	Programmable 51P Logic Mode	INT
41708	Programmable 51N Logic Mode	INT
41725	Programmable 51Q Logic Mode	INT
41759	Programmable 151N Logic Mode	INT
	Read and Write:	
	0 for disabled	
	1 for enabled	
41844	Programmable 62 Timer Logic Mode	INT
41877	Programmable 162 Timer Logic Mode	INT
	Read and Write:	
	0 for disabled	
	1 for Pickup / Dropout	
	2 for One-Shot Non-Retriggerable	
	3 for One-Shot Retriggerable	

	4 for Oscillator 5 for Integrating 6 for Edge Triggered Latch	
43173	Programmable 79 Logic Mode	INT
	Read and Write:	
	0 for Recloser disabled 1 for Recloser standard power-up operation 2 for Recloser power-up to close operation	
41910	Programmable 27P Logic Mode	INT
41927	Programmable 27X Logic Mode	INT
41944	Programmable 59P Logic Mode	INT
41961	Programmable 59X Logic Mode	INT
43236	Programmable 81 Logic Mode	INT
43253	Programmable 181 Logic Mode	INT
43270	Programmable 281 Logic Mode	INT
43287	Programmable 381 Logic Mode	INT
43304	Programmable 481 Logic Mode	INT
43321	Programmable 581 Logic Mode	INT
	Read and Write:	
	0 for disabled 1 for enabled	
43338	Programmable 47 Logic Mode	INT
43355	Programmable 24 Logic Mode	INT
43372	Programmable 25 Logic Mode	INT
42010	Programmable Settings Group Logic Mode	INT
	Read and Write:	
	0 for all setting groups disabled except group 0 1 for selecting setting group via pulsed input logic 2 for selecting setting group via sustained input logic	
42091	Programmable 43 Virtual Switch Logic Mode	INT
42092	Programmable 143 Virtual Switch Logic Mode	INT
42093	Programmable 243 Virtual Switch Logic Mode	INT
42094	Programmable 343 Virtual Switch Logic Mode	INT
	Read and Write:	
	0 for disabled 1 for on / off / pulse (all) 2 for on / off 3 for pulse	
42099	Programmable 101 Virtual Breaker Control Logic Mode	INT
	Read and Write:	
	0 for disabled 1 for enabled	

Logic Mask And Terms

Each set bit in the "mask" parameter indicates a significant variable in the equation. A corresponding bit in the "term" parameter indicates that the variable must be TRUE / 1 if set or FALSE / 0 if not set.

Mask and Term - First Register (Logic Var 0 to 15)	BM(16)
Bit 15 - 50TQ picked-up	
Bit 14 - 150T neutral picked-up	
Bit 13 - 50T neutral picked-up	
Bit 12 - 150T phase picked-up	
Bit 11 - 50T phase picked-up	
Bit 10 - 51Q tripped	
Bit 9 - 151 neutral tripped	

Bit 8 - 51 neutral tripped
Bit 7 - 51 phase tripped
Bit 6 - BF tripped
Bit 5 - 150TQ tripped
Bit 4 - 50TQ tripped
Bit 3 - 150T neutral tripped
Bit 2 - 50T neutral tripped
Bit 1 - 150T phase tripped
Bit 0 - 50T phase tripped

Mask and Term - Second Register (Logic Var 16 to 31)

BM(16)

Bit 15 - Logic always false
Bit 14 - 79SCB
Bit 13 - 79F
Bit 12 - 79LO
Bit 11 - 79RNG
Bit 10 - 79C
Bit 9 - 343
Bit 8 - 243
Bit 7 - 143
Bit 6 - 43
Bit 5 - 51Q picked-up
Bit 4 - 151 neutral picked-up
Bit 3 - 51 neutral picked-up
Bit 2 - 51 phase picked-up
Bit 1 - BF picked-up
Bit 0 - 150TQ picked-up

Mask and Term - Third Register (Logic Var 32 to 47)

BM(16)

Bit 15 - Virtual Output 15 status
Bit 14 - Virtual Output 14 status
Bit 13 - Virtual Output 13 status
Bit 12 - Virtual Output 12 status
Bit 11 - Virtual Output 11 status
Bit 10 - Virtual Output 10 status
Bit 9 - Virtual Output 9 status
Bit 8 - Virtual Output 8 status
Bit 7 - Virtual Output 7 status
Bit 6 - Virtual Output 6 status
Bit 5 - Virtual Output 5 status
Bit 4 - Virtual Output 4 status
Bit 3 - Virtual Output 3 status
Bit 2 - Virtual Output 2 status
Bit 1 - Virtual Output 1 status
Bit 0 - Virtual Output A status

Mask and Term - Fourth Register (Logic Var 48 to 63)

BM(16)

Bit 15 - Target reset key
Bit 14 - Output circuit monitor
Bit 13 - Alarm minor
Bit 12 - Alarm major
Bit 11 - Alarm logic
Bit 10 - 101 SC
Bit 9 - 101C
Bit 8 - 101T
Bit 7 - Spare
Bit 6 - Spare
Bit 5 - 162
Bit 4 - 62
Bit 3 - Input 4 status
Bit 2 - Input 3 status

Bit 1 - Input 2 status
Bit 0 - Input 1 status

Mask and Term - Fifth Register (Logic Var 64 to 79)

BM(16)

Bit 15 - 59X tripped
Bit 14 - Spare
Bit 13 - 59 phase tripped
Bit 12 - Spare
Bit 11 - Spare
Bit 10 - 47 picked-up
Bit 9 - 47 tripped
Bit 8 - Spare
Bit 7 - 27 phase picked-up
Bit 6 - Spare
Bit 5 - 27 phase tripped
Bit 4 - Settings Group 3
Bit 3 - Settings Group 2
Bit 2 - Settings Group 1
Bit 1 - Settings Group 0
Bit 0 - Alarm reset key

Mask and Term - Sixth Register (Logic Var 80 to 95)

BM(16)

Bit 15 - 60FL
Bit 14 - 25 tripped
Bit 13 - Spare
Bit 12 - Spare
Bit 11 - Spare
Bit 10 - Spare
Bit 9 - Spare
Bit 8 - 581 tripped
Bit 7 - 481 tripped
Bit 6 - 381 tripped
Bit 5 - 281 tripped
Bit 4 - 181 tripped
Bit 3 - 81 tripped
Bit 2 - 59X picked-up
Bit 1 - Spare
Bit 0 - 59 phase picked-up

Logic Term Count

Term Count Register

SI

0 means the logic equation is disabled (NONE)
-1 means the logic equation consists of a single term of OR-ed variables
1 means the logic equation consists of a single term of AND-ed variables
2 means the logic equation consists of the OR-ing of 2 terms of AND-ed variables
3 means the logic equation consists of the OR-ing of 3 terms of AND-ed variables
4 means the logic equation consists of the OR-ing of 4 terms of AND-ed variables

Session Parameters

40001

Exit

ASC(1)

Read: always the ASCII character '0' (zero)

Write: ASCII characters 'Y' or 'N' ('Y' to save changes, 'N' to ignore changes)

Note 1: ERROR DETAIL block (49835-54) contains Exit status message following a write.

Note 2: Writing to this register is effective only when Password Security register 40989 is enabled.

40002-5

Access Password

ASC(8)

Read: always the ASCII string of '*' characters.

Write: access password in ASCII string.

Note 1: If password written is less than 8 characters long, a binary zero value must be included following the final password character.

Report Text 47595-719	Report Selection 40039	Report Focus 40040
RS Report	7	Not used
RS-# Report	8	Value of # (1 - 255)
RS-NEW Report	9	Not used
RS-F# Report	10	Value of # (1 - 255)
RS-ALM	11	Not used
RS-IO	12	Not used
RS-LGC	13	Not used

Global Parameters

Global Parameter registers 40080 - 40099 are effective only for serial communication ports active with ASCII protocol and for the Modbus serial port, COM2, when Password Security register 40989 is enabled.

40080-83	Global Password	ASC(8)
40085-88	Setting Password	ASC(8)
40090-93	Control Password	ASC(8)
40095-98	Report Password	ASC(8)
	Read: If global access granted, password ASCII strings are read. Otherwise, The ASCII string of "*" characters is read.	
	Write: Password in ASCII string.	
	Note: If password written is less than 8 characters long, a binary zero value must be included following the final password character.	
40084	Global Path	BM(8)
40089	Setting Path	BM(8)
40094	Control Path	BM(8)
40099	Report Path	BM(8)
	Read: path associated with password.	
	Write: path associated with password.	
	Bit 2 is set for COM 2 access.	
	Bit 1 is set for COM1 access.	
	Bit 0 is set for COM0 / FP access.	

Control Parameters

All values read from and written to Select and Operate registers are ASCII characters. Select registers must be written first, followed by a write to the Operate register. A 30 second window starts after the first write to the Select register. If the second write to the Operate register is not received within the 30 second window, an error response will be returned.

Writes to Operate registers 40138, 40140 - 40150 with ASCII data 'E' (Enable Output override control) or 'D' (Disable Output override control) requires an additional write of 'Y' to Exit register 40001 to allow these control settings to be saved to the relay internal EEPROM.

NOTE: All values read from and written to Select and Operate registers are ASCII characters.

40117	Select Group	ASC(1)
	Read: To read a value other than ASCII character 'X', the Select Group register must be the most recent control register written AND must have been written within the previous 30 seconds.	
	0 if Group 0 selection has been made.	
	1 if Group 1 selection has been made.	
	2 if Group 2 selection has been made.	
	3 if Group 3 selection has been made.	
	L if Logic selection has been made.	
	X if Group control not selected or control timer has expired	
	Write: the desired ASCII character.	
	0 to select Group 0.	
	1 to select Group 1.	
	2 to select Group 2.	
	3 to select Group 3.	
	L to select Logic.	

40118	Operate Group	ASC(1)
	Read: Current control.	
	0 if Group 0.	
	1 if Group 1.	
	2 if Group 2.	
	3 if Group 3.	
	L if Logic.	
	Write: the desired ASCII character to alter control (corresponding Select register must contain same value, written within previous 30 seconds).	
	0 to select Group 0.	
	1 to select Group 1.	
	2 to select Group 2.	
	3 to select Group 3.	
	L to select Logic.	
40119	Select Virtual Selector Switch 43	ASC(1)
40121	Select Virtual Selector Switch 143	ASC(1)
40123	Select Virtual Selector Switch 243	ASC(1)
40125	Select Virtual Selector Switch 343	ASC(1)
	Read: To read a value other than ASCII character 'X', the Select Virtual Selector Switch register must be the most recent control register written AND must have been written within the previous 30 seconds.	
	P if Pulse Switch selection has been made.	
	0 if Latch Switch at 0 selection has been made.	
	1 if Latch Switch at 1 selection has been made.	
	X if Virtual Selector Switch control not selected or control timer has expired	
	Write: the desired ASCII character.	
	P to select Pulsing the Switch.	
	0 to select Latching the Switch at 0.	
	1 to select Latching the Switch at 1.	
40120	Operate Virtual Selector Switch 43	ASC(1)
40122	Operate Virtual Selector Switch 143	ASC(1)
40124	Operate Virtual Selector Switch 243	ASC(1)
40126	Operate Virtual Selector Switch 343	ASC(1)
	Read: Current control.	
	P if Pulse Switch.	
	0 if Latch Switch at 0.	
	1 if Latch Switch at 1.	
	Write: the desired ASCII character to alter control (corresponding Select register must contain same value, written within previous 30 seconds).	
	P to Pulse Switch.	
	0 to Latch Switch at 0.	
	1 to Latch Switch at 1.	
40135	Select 101 Virtual Breaker Control Switch	ASC(1)
	Read: To read a value other than ASCII character 'X', the Select 101 Virtual Breaker Control Switch register must be the most recent control register written AND must have been written within the previous 30 seconds.	
	C if Close selection has been made.	
	T if Trip selection has been made.	
	X if 101 Virtual Breaker Control Switch control not selected or control timer has expired	
	Write: the desired ASCII character.	
	C to select Closing the Switch.	
	T to select Tripping the Switch.	
40136	Operate 101 Virtual Breaker Control Switch	ASC(1)
	Read: Current control.	
	C if Close Switch.	
	T if Trip Switch.	

40146	Operate Output 3	ASC(1)
40148	Operate Output 4	ASC(1)
40150	Operate Output 5	ASC(1)

Read: Current control.

P to Pulse Output.

0 to Latch Output at 0.

1 to Latch Output at 1.

L to select programmable Logic.

D if All Outputs override control Disabled

Write: the desired ASCII character to alter control (corresponding Select register must contain same value, written within previous 30 seconds).

P to Pulse Output.

0 to Latch Output at 0.

1 to Latch Output at 1.

L to select programmable Logic.

E to Enable All Outputs override control. *

D to Disable All Outputs override control. *

* Requires an additional write of 'Y' to Exit register 40001 to allow these control settings to be saved to the relay internal EEPROM.

Group Setting Parameters

40259-60	50TP Pickup	FP
40264-65	50TN Pickup	FP
40269-70	50TQ Pickup	FP
40274-75	150TP Pickup	FP
40279-80	150TN Pickup	FP
40284-85	150TQ Pickup	FP

Read and Write: 0.50 to 150.00 Amps

40261-62	50TP Time Delay	LI
40266-67	50TN Time Delay	LI
40271-72	50TQ Time Delay	LI
40276-77	150TP Time Delay	LI
40281-82	150TN Time Delay	LI
40286-87	150TQ Time Delay	LI

Read and Write: 0 to 60,000 Milli-seconds

40263	50TP Directional Mode	ASC(1)
40268	50TN Directional Mode	ASC(1)
40273	50TQ Directional Mode	ASC(1)
40278	150TP Directional Mode	ASC(1)
40283	150TN Directional Mode	ASC(1)
40288	150TQ Directional Mode	ASC(1)

Read and Write:

R = Reverse

N = Neutral

F = Forward

40301-02	51P Pickup	FP
40308-09	51N Pickup	FP
40315-16	51Q Pickup	FP
40322-23	151N Pickup	FP

Read and Write: 0.50 to 16.00 Amps

40303-04	51P Time Dial	FP
40310-11	51N Time Dial	FP
40317-18	51Q Time Dial	FP
40324-25	151N Time Dial	FP

Read and Write: 0.0 to 9.9

40305-06	51P Curve Type	ASC(3)
40312-13	51N Curve Type	ASC(3)
40319-20	51Q Curve Type	ASC(3)
40326-27	151N Curve Type	ASC(3)
	Read and Write: one of the following ASCII strings	
	S1, S2, L1, L2, D, M, I1, I2, V1, V2, E1, E2, S1R, S2R, L1R, L2R, DR, MR, I1R, I2R, V1R, V2R, E1R, E2R, A, B, C, G, F, P, AR, BR, CR, GR, FR, PR	
40307	51P Directional Mode	ASC(1)
40314	51N Directional Mode	ASC(1)
40321	51Q Directional Mode	ASC(1)
40328	151N Directional Mode	ASC(1)
	Read and Write:	
	R = Reverse	
	N = Neutral	
	F = Forward	
40359-60	62 Time Delay 1	LI
40361-62	62 Time Delay 2	LI
40363-64	162 Time Delay 1	LI
40365-66	162 Time Delay 2	LI
	Read and Write: 0 to 9,999,000 Milli-seconds	
40406-07	79 First Automatic Reclose Delay	LI
40408-09	79 Second Automatic Reclose Delay	LI
40410-11	79 Third Automatic Reclose Delay	LI
40412-13	79 Fourth Automatic Reclose Delay	LI
40414-15	79 Reset Time Delay	LI
40416-17	79 Reclose Fail Time Delay	LI
40418-19	79 Maximum Reclose Time	LI
	Read and Write: 100 to 600,000 Milli-seconds 0 to disable	
40420	79 Sequence Control	BM(16)
	Read and Write:	
	Bit 0 to Block Shot #1	
	Bit 1 to Block Shot #2	
	Bit 2 to Block Shot #3	
	Bit 3 to Block Shot #4	
	Bit 4 to Block Shot #5	
40429-30	27R Pickup	FP
	Read and Write: 30.0 to 250	
40431	27R Control Mode	ASC(1)
	Read and Write: R or C	
40432-33	47 Pickup	FP
	Read and Write: 1 to 300	
40434-35	47 Time Delay	LI
	Read and Write 50 to 600,000 Milli-seconds	
40436-37	59 Pickup	FP
40440-41	59X Pickup	FP
40516-17	159X Pickup	FP
	Read and Write: 10.0 to 300	
40438-39	59 Time Delay	LI

40442-43	59X Time Delay	LI
40518-19	159X Time Delay	LI
	Read and Write 50 to 600,000 Milli-seconds	
40444-45	81 Pickup	FP
40449-50	181 Pickup	FP
40454-55	281 Pickup	FP
40459-60	381 Pickup	FP
40464-65	481 Pickup	FP
40469-70	581 Pickup	FP
	Read and Write: 40.00 to 70.00 Hz	
40446-47	81 Time Delay	LI
40451-52	181 Time Delay	LI
40456-57	281 Time Delay	LI
40461-62	381 Time Delay	LI
40466-67	481 Time Delay	LI
40471-72	581 Time Delay	LI
	Read and Write: 1000 to 600,000 Milli-seconds	
40448	81 Mode	ASC(1)
40453	181 Mode	ASC(1)
40458	281 Mode	ASC(1)
40463	381 Mode	ASC(1)
40468	481 Mode	ASC(1)
40473	581 Mode	ASC(1)
	Read and Write: O = Over Frequency U = Under Frequency	
40474-75	81 Inhibit Setting	FP
	Read and Write: 15.0 to 300	
40476-77	27 Pickup	FP
	Read and Write: 10.0 to 300	
40480-81	27X Pickup	FP
	Read and Write: 1.00 to 150	
40478-79	27 Time Delay	LI
40482-83	27X Time Delay	LI
	Read and Write: 100 to 600,000 Milli-seconds	
40484-85	24 Pickup	FP
	Read and Write: 0.5 to 6.0	
40486-87	24 Time Delay	FP
40488-89	24 Reset Delay	FP
	Read and Write: 0 to 9.9	
40490-91	25 Delta Volts	FP
	Read and Write: 1.0 to 20.0	
40492-93	25 Phase Angle	FP
	Read and Write: 1 to 25	
40494-95	25 Slip Frequency	FP
	Read and Write: 0 to 0.5 Hz	
40496	25 Mode	LI

Read and Write: 1 = GF>BF
0 = GF<>BF

40497-98	25 VM Live Volts	FP
40499-500	25 VM Dead Volts	FP
	Read and Write: 10.0 to 150	
40501-02	25 VM Time Delay	LI
	Read and Write: 50 to 60,000 Milli-seconds	
40503-04	25 VM Mode 1	ASC(3)
40505-06	25 VM Mode 2	ASC(3)
	Read and Write: 1,2, and/or 3, DIS	
40507-08	67 Neutral Polarizing Mode	ASC(3)
	Read and Write: QVI,QV,QI,VI,Q,V,I	
40509-10	67 Neutral Polarizing Quantity	ASC(4)
	Read and Write: V0IN, V0IG, VXIN, VXIG	
40511-12	32 Pickup	FP
	Read and Write: 1.00 to 6000.00 Watts	
40513-14	32 Time Delay	LI
	Read and Write: 50 to 600,000 Milli-seconds	
40515	32 Mode	
	Read and Write: Forward or Reverse	
Global Setting Parameters		
40602-03	Power System Nominal Voltage	FP
	Read and Write: 50 to 250	
40604-05	Power System Nominal Current	FP
	Read and Write: 0.5 to 10.0	
40606-07	Breaker Fail Time Delay	LI
	Read and Write: 50 to 999 milliseconds 0 to disable	
40608-09	Programmable 51 Curve Constant A Delay	FP
	Read and Write: 0.0000 to 600.0000	
40610-11	Programmable 51 Curve Constant B Delay	FP
	Read and Write: 0.0000 to 25.0000	
40612-13	Programmable 51 Curve Constant C Delay	FP
	Read and Write: 0.0000 to 1.0000	
40614-15	Programmable 51 Curve Constant N Delay	FP
	Read and Write: 0.5000 to 2.5000	
40616-17	Programmable 51 Curve Constant R Delay	FP
	Read and Write: 0.0000 to 30.0000	
40618	Input 1 Contact Recognition Time Delay	SI
40619	Input 1 Contact Debounce Time Delay	SI
40620	Input 2 Contact Recognition Time Delay	SI
40621	Input 2 Contact Debounce Time Delay	SI
40622	Input 3 Contact Recognition Time Delay	SI
40623	Input 3 Contact Debounce Time Delay	SI
40624	Input 4 Contact Recognition Time Delay	SI
40625	Input 4 Contact Debounce Time Delay	SI
	Read and Write: 4 to 255 Milli-seconds	
40746-870	Contiguous Poll Block Assignments	INT

	Read and Write:	
	0 if Unassigned	
	1 to 9874: Holding Register 40001 to 49874	
40871	Setting Group Control On Time	INT
	Read and Write: 0 to 10 Seconds	
40872	Setting Group 1 Automatic Control Switch Time	SI
40874	Setting Group 1 Automatic Control Return Time	SI
40877	Setting Group 2 Automatic Control Switch Time	SI
40879	Setting Group 2 Automatic Control Return Time	SI
40882	Setting Group 3 Automatic Control Switch Time	SI
40884	Setting Group 3 Automatic Control Return Time	SI
	Read and Write: 0 to 60 Minutes	
40873	Setting Group 1 Automatic Control Switch Level	SI
40875	Setting Group 1 Automatic Control Return Level	SI
40878	Setting Group 2 Automatic Control Switch Level	SI
40880	Setting Group 2 Automatic Control Return Level	SI
40883	Setting Group 3 Automatic Control Switch Level	SI
40885	Setting Group 3 Automatic Control Return Level	SI
	Read and Write: 0 to 150%	
40876	Setting Group 1 Tracking Element	INT
40881	Setting Group 2 Tracking Element	INT
40886	Setting Group 3 Tracking Element	INT
	Read and Write: 0 to 7 (0 =51P, 1=51Q, 2=51N, 3=151N, 4=791, 5=792, 6=793, 7=794)	
40903-04	60FL Loss of Current Auto Block Setting	ASC(3)
	Read and Write: ENA/DIS	
40905-06	60FL Loss of Voltage Auto Block Setting	ASC(3)
	Read and Write: DIS/PNQ/PN/PQ/NQ/P/N/Q	
Serial Port Setting Parameters		
40962	Serial Port 0 Baud Rate	INT
40971	Serial Port 1 Baud Rate	INT
40980	Serial Port 2 Baud Rate	INT
	Read and Write:	
	0 - 300 Baud (Do not select for port 2 Modbus communications)	
	1 - 600 Baud (Do not select for port 2 Modbus communications)	
	2 - 1200 Baud (Do not select for port 2 Modbus communications)	
	3 - 2400 Baud	
	4 - 4800 Baud	
	5 - 9600 Baud	
	6 - 19K Baud	
40972	Serial Port 1 Relay Address	INT
40981	Serial Port 2 Relay Address	INT
	Read and Write: 0 to 65,534	
40964	Serial Port 0 Software Flow Control	SI
40973	Serial Port 1 Software Flow Control	SI
	Read:	
	0 if XON / XOFF Control is disabled	
	1 if XON / XOFF Control is enabled	
	Write:	
	0 to disable XON / XOFF Control	
	1 to 255 to enable XON / XOFF Control	
40965	Serial Port 0 Page Length	SI

40974 Serial Port 1 Page Length SI
 Read and Write:
 0 for disabled
 1 to 40 for number of lines / page

40966 Serial Port 0 Acknowledgement Format SI
 40975 Serial Port 1 Acknowledgement Format SI
 Read:
 0 if No acknowledge
 1 if Acknowledge enabled
 Write:
 0 for No acknowledge
 1 to 255 to enable acknowledge

40986 Serial Port 2 Modbus Parity SI
 Read and Write:
 0 for No parity
 1 for Even parity
 2 for Odd parity

40987 Serial Port 2 Modbus Remote Delay SI
 Read and Write:
 1 to 20: 10 to 200 Milli-seconds

40988 Serial Port 2 Modbus Stop Bits SI
 Read and Write:
 1 for One stop bit
 2 for Two stop bits

40989 Password Security SI
 Read and Write:
 Default value is disabled
 1 to enable Password Security.

When Password Security is enabled, relay parameters can be changed via Modbus only if access is obtained via the Access Password and Access Request holding registers, and released via the Exit register with value 89 (ASCII character 'Y').

0 to disable Password Security.
 When Password Security is disabled, no access is required (Access Password, Access Request, and Exit holding registers have no effect) and no password protection is used. Global Parameters, holding registers 40080 - 40099 (ASCII command GF-PW), have no effect on the Modbus serial port, COM2.

System Data Setting Parameters

41018 System Frequency SI
 Read and Write:
 50 for 50 Hertz
 60 for 60 Hertz

41019-20 Phase Rotation ASC(3)
 Read and Write:
 ABC for ABC rotation
 ACB for ACB rotation

41021 Phase CT Ratio INT
 41022 Ground CT Ratio INT
 Read and Write: 1 to 50,000

41033-34 Phase VT Ratio FP

41041-42	Auxiliary VT Ratio Read and Write: 1 to 9999	FP
41035-36	27/59 Voltage Sensing Mode	ASC(3)
41037-38	51/27R Voltage Sensing Mode Read and Write: PP for Line PN for Phase	ASC(3)
41039-40	VT Connection Read and Write: 3W for 3W 4W for 4W AB for AB BC for BC CA for CA AN for AN BN for BN CN for CN	ASC(3)
41043-44	VT Auxiliary Connection Read and Write: AB for AB BC for BC CA for CA AN for AN BN for BN CN for CN GR for GR	ASC(3)
41045	Load Profile Interval Read and Write: 1 to 60 minutes	INT
41046-47	Power Line - Z1 Impedance Read and Write: 0.1 to 200	FP
41050-51	Power Line - Z0 Impedance Read and Write: 0.05 to 650	FP
41048-49	Power Line - Z1 Angle	FP
41052-53	Power Line - Z0 Angle Read and Write: 0.1 to 90	FP
41054	Power Line - Line Length Read and Write: 0.01 to 650	INT
Breaker Duty Setting Parameters		
41092	Breaker Duty Type Read and Write: 0 for Off 1 for Sum I, primary centi-amps 2 for Sum I ² , primary centi-amps	SI
41093-94	Maximum Breaker Duty Read and Write: 0 to 42,900,000 Amps	FP
41096	Programmable Breaker Alarm #1 Mode	INT

41099	Programmable Breaker Alarm #2 Mode	INT
41102	Programmable Breaker Alarm #3 Mode	INT
	Read and Write:	
	0 for Disabled	
	1 for Percent duty	
	2 for Breaker operations	
	3 for Clearing time	
41097-98	Programmable Breaker Alarm #1 Limit	FP
41100-01	Programmable Breaker Alarm #2 Limit	FP
41103-04	Programmable Breaker Alarm #3 Limit	FP
	Read and Write:	
	If mode is 0: Reads 0, Any value writes 0	
	If mode is 1: 0.00 to 100.00%	
	If mode is 2: 0 to 99,999	
	If mode is 3: 0, 20 to 1000 Milli-seconds	

Relay Data Setting Parameters

41247	Volts / Hertz alarm settings Read and Write: 0 to 120 percent	INT
41251-52	Forward Var Demand Alarm	FP
41253-54	Reverse Var Demand Alarm Read and Write: 0.0 to 8500 Vars	FP
41255-56	Forward Watt Demand Alarm	FP
41257-58	Reverse Watt Demand Alarm Read and Write: 0.0 to 8500 Vars	FP
41259-60	Phase Demand Alarm Level	FP
41261-62	Neutral Demand Alarm Level	FP
41263-64	Negative Sequence Demand Alarm Level Read and Write: 0.00 to 16.00 Amps	FP
41265-66	Major Alarm Mask MSBs	BM(16)
41267-68	Minor Alarm Mask MSBs	BM(16)
41269-70	Logic Alarm Mask MSBs Read and Write:	BM(16)
	Bit 15 - Spare	
	Bit 14 - Volts per Hertz alarm	
	Bit 13 - 60 Fuse Loss alarm	
	Bit 12 - Changes Lost alarm	
	Bit 11 - Freq Range alarm	
	Bit 10 - Watt Demand alarm	
	Bit 9 - Var Demand alarm	
	Bit 8 - Logic = None alarm	
	Bit 7 - Flt Rpt Timeout alarm	
	Bit 6 - Virtual Output 15 alarm	
	Bit 5 - Virtual Output 14 alarm	
	Bit 4 - Virtual Output 13 alarm	
	Bit 3 - Setting Group Change Active alarm	
	Bit 2 - Loss of IRIG-B sync or IRIG-B decode problem	
	Bit 1 - An override is active in one or more outputs	
	Bit 0 - EEPROM Non fatal error	
41266	Major Alarm Mask LSBs	BM(16)
41268	Minor Alarm Mask LSBs	BM(16)
41270	Logic Alarm Mask LSBs	BM(16)

Read and Write:

- Bit 15 - User settings changed, ('EXIT' with 'Y')
- Bit 14 - Power reset alarm, hard reset of MPU
- Bit 13 - Clock problem, real time clock has not been set
- Bit 12 - Communicating failure alarm, read error on serial port
- Bit 11 - Operating System Overload detected alarm
- Bit 10 - Setting group override in effect
- Bit 9 - Q demand alarm, excessive negative sequence unbalance
- Bit 8 - Neutral demand alarm
- Bit 7 - Phase demand alarm
- Bit 6 - Breaker alarm #3
- Bit 5 - Breaker alarm #2
- Bit 4 - Breaker alarm #1
- Bit 3 - Recloser Lockout
- Bit 2 - Recloser Fail
- Bit 1 - Breaker fail alarm
- Bit 0 - Out 1 CKT Open alarm

41272	Clock Format - Date	ASC(1)
	Read and Write: M for mm/dd/yy format D for dd/mm/yy format	
41273	Clock Format - Time	SI
	Read and Write: 12 for 12-hour clock 24 for 24-hour clock	
41274	Clock Format - Daylight Savings	SI
	Read and Write: 0 for disabling Daylight Savings 1 for enabling Daylight Savings	
41275	Phase Demand Interval	SI
41276	Neutral Demand Interval	SI
41277	Negative Sequence Demand Interval	SI
	Read and Write: 1 to 60 minutes 0 to disable	
41284	Output Hold Mask	BM(8)
	Read and Write: Bit 7 - Spare Bit 6 - Spare Bit 5 - Output 5 Status Bit 4 - Output 4 Status Bit 3 - Output 3 Status Bit 2 - Output 2 Status Bit 1 - Output 1 Status Bit 0 - Output A Status	
41287	Target Mask MSBs	BM(16)
	Read and Write: Bit 15 - 51Q Bit 14 - 151N Bit 13 - 51N Bit 12 - 51C Bit 11 - 51B Bit 10 - 51A Bit 9 - 150TQ Bit 8 - 50TQ Bit 7 - 150TN	

Bit 6 - 50TN
Bit 5 - 150TC
Bit 4 - 150TB
Bit 3 - 150TA
Bit 2 - 50TC
Bit 1 - 50TB
Bit 0 - 50TA

41288 Target Mask Second MSBs BM(16)

Read and Write:

Bit 15 - BF
Bit 14 - 49
Bit 13 - 47
Bit 12 - 46
Bit 11 - 40QP
Bit 10 - 132P
Bit 9 - 32P
Bit 8 - 127N
Bit 7 - 27N
Bit 6 - 127C
Bit 5 - 127B
Bit 4 - 127A
Bit 3 - 27C
Bit 2 - 27B
Bit 1 - 27A
Bit 0 - 24

41289 Target Mask Third MSBs BM(16)

Read and Write:

Bit 15 - 581
Bit 14 - 481
Bit 13 - 381
Bit 12 - 281
Bit 11 - 181
Bit 10 - 81
Bit 9 - 67TQ
Bit 8 - 167TN
Bit 7 - 67TN
Bit 6 - 67TC
Bit 5 - 67TB
Bit 4 - 67TA
Bit 3 - 167Q
Bit 2 - 67Q
Bit 1 - 167N
Bit 0 - 67N

41290 Target Mask LSBs BM(16)

Read and Write:

Bit 15 - 167C
Bit 14 - 167B
Bit 13 - 167A
Bit 12 - 67C
Bit 11 - 67B
Bit 10 - 67A
Bit 9 - 362
Bit 8 - 262
Bit 7 - 162
Bit 6 - 62
Bit 5 - 60FL
Bit 4 - 159N
Bit 3 - 59N

Bit 2 - 59C

Bit 1 - 59B

Bit 0 - 59A

41291-94	Programmable Screen #1	ASC(7)
41295-98	Programmable Screen #2	ASC(7)
41299-302	Programmable Screen #3	ASC(7)
41303-06	Programmable Screen #4	ASC(7)
41307-10	Programmable Screen #5	ASC(7)
41311-14	Programmable Screen #6	ASC(7)
41315-18	Programmable Screen #7	ASC(7)
41319-22	Programmable Screen #8	ASC(7)
41323-26	Programmable Screen #9	ASC(7)
41327-30	Programmable Screen #10	ASC(7)
41331-34	Programmable Screen #11	ASC(7)
41335-38	Programmable Screen #12	ASC(7)
41339-42	Programmable Screen #13	ASC(7)
41343-46	Programmable Screen #14	ASC(7)
41347-50	Programmable Screen #15	ASC(7)
41351-54	Programmable Screen #16	ASC(7)

Read and Write: screen identifier. For example, the Output Status Screen would be 1.5.2

Custom Logic Setting Parameters

41465-68	User Custom Logic Name	ASC(8)
	Read: If programming, reads custom logic name	
	Write: New custom logic name or standard logic name of logic scheme to be copied to custom scheme.	
41469-72	Current Active Logic Scheme	ASC(8)
	Read: Current active logic name.	
41473-76	Custom Logic Name	ASC(8)
	Read: Custom logic name.	
41477-80	Standard Logic #1 Name	ASC(8)
	Read: Standard logic name #1.	
41481-84	Standard Logic #2 Name	ASC(8)
	Read: Standard logic name #2.	
41485-88	Standard Logic #3 Name	ASC(8)
	Read: Standard logic name #3.	
41489-92	Standard Logic #4 Name	ASC(8)
	Read: Standard logic name #4.	
41493-96	Standard Logic #5 Name	ASC(8)
	Read: Standard logic name #5.	
41497-500	Standard Logic #6 Name	ASC(8)
	Read: Standard logic name #6.	
41501-04	Standard Logic #7 Name	ASC(8)
	Read: Standard logic name #7.	

System Labels and ID Setting Parameters

All are Read and Write of ASCII strings.

Report Parameters

47194-95	Peak Demand Vars	FP
----------	------------------	----

47199-200	Peak Demand Reverse Vars	FP
47214-15	Today's Demand Vars	FP
47219-20	Today's Demand Reverse Vars	FP
47234-35	Yesterday's Demand Vars	FP
47239-40	Yesterday's Demand Reverse Vars	FP
	Read only: Any value (K-Vars)	
47204-05	Peak Demand Watts	FP
47209-10	Peak Demand Reverse Watts	FP
47224-25	Today's Demand Watts	FP
47229-30	Today's Demand Reverse Watts	FP
47244-45	Yesterday's Demand Watts	FP
47249-50	Yesterday's Demand Reverse Watts	FP
	Read only: Any value (K-Watts)	
47196	Peak Demand Vars Timestamp - Day	INT
47201	Peak Demand Reverse Vars Timestamp - Day	INT
47206	Peak Demand Watts Timestamp - Day	INT
47211	Peak Demand Reverse Watts Timestamp - Day	INT
47216	Today's Demand Vars Timestamp - Day	INT
47221	Today's Demand Reverse Vars Timestamp - Day	INT
47226	Today's Demand Watts Timestamp - Day	INT
47231	Today's Demand Reverse Watts Timestamp - Day	INT
47236	Yesterday's Demand Vars Timestamp - Day	INT
47241	Yesterday's Demand Reverse Vars Timestamp - Day	INT
47246	Yesterday's Demand Watts Timestamp - Day	INT
47251	Yesterday's Demand Reverse Watts Timestamp - Day	INT
	Read only: Any value (days since 01/01/1984).	
47197-98	Peak Demand Vars Timestamp - Millisecond	LI
47202-03	Peak Demand Reverse Vars Timestamp - Millisecond	LI
47207-08	Peak Demand Watts Timestamp - Millisecond	LI
47212-13	Peak Demand Reverse Watts Timestamp - Millisecond	LI
47217-18	Today's Demand Vars Timestamp - Millisecond	LI
47222-23	Today's Demand Reverse Vars Timestamp - Millisecond	LI
47227-28	Today's Demand Watts Timestamp - Millisecond	LI
47232-33	Today's Demand Reverse Watts Timestamp - Millisecond	LI
47237-38	Yesterday's Demand Vars Timestamp - Millisecond	LI
47242-43	Yesterday's Demand Reverse Vars Timestamp - Millisecond	LI
47247-48	Yesterday's Demand Watts Timestamp - Millisecond	LI
47252-53	Yesterday's Demand Reverse Watts Timestamp - Millisecond	LI
	Read Only: 0 to 86,399, 999 Milli-seconds	
47254-55	3 Phase Var Hours	FP
47256-57	3 Phase Reverse Var Hours	FP
	Read Only: Any value (K-Var Hours)	
47258-59	3 Phase Watt Hours	FP
47260-61	3 Phase Reverse Watt Hours	FP
	Read Only: Any value (K-Watt Hours)	
47274-78	Model Number	ASC(10)
47282-89	Application SW Version # / Date	ASC(16)
47296-302	Boot SW Version # / Date	ASC(14)
47310-16	Serial Number	ASC(13)
47324-34	Style Number	ASC(21)
	Read Only: ASCII strings	
47362	COM1 Serial Port Relay Address	INT
47363	COM2 Serial Port Relay Address	INT
	Read and Write: 0 to 65,534	

47364	Date and Time - Day Read and Write: any value (days since 01/01/1984).	INT
47365-66	Date and Time - Milliseconds Read and Write: 0 to 86,399,999 Milli-seconds	LI
47367	System Status (Logic Var 0 to 15) Read only: Bit 15 - 50TQ picked-up Bit 14 - 150T neutral picked-up Bit 13 - 50T neutral picked-up Bit 12 - 150T phase picked-up Bit 11 - 50T phase picked-up Bit 10 - 51Q tripped Bit 9 - 151 neutral tripped Bit 8 - 51 neutral tripped Bit 7 - 51 phase tripped Bit 6 - BF tripped Bit 5 - 150TQ tripped Bit 4 - 50TQ tripped Bit 3 - 150T neutral tripped Bit 2 - 50T neutral tripped Bit 1 - 150T phase tripped Bit 0 - 50T phase tripped	BM(16)
47368	System Status (Logic Var 16 to 31) Read only: Bit 15 - Logic always false Bit 14 - 79SCB Bit 13 - 79F Bit 12 - 79LO Bit 11 - 79RNG Bit 10 - 79C Bit 9 - 343 Bit 8 - 243 Bit 7 - 143 Bit 6 - 43 Bit 5 - 51Q picked-up Bit 4 - 151 neutral picked-up Bit 3 - 51 neutral picked-up Bit 2 - 51 phase picked-up Bit 1 - BF picked-up Bit 0 - 150TQ picked-up	BM(16)
47369	System Status (Logic Var 32 to 47) Read only: Bit 15 - Virtual Output 15 status Bit 14 - Virtual Output 14 status Bit 13 - Virtual Output 13 status Bit 12 - Virtual Output 12 status Bit 11 - Virtual Output 11 status Bit 10 - Virtual Output 10 status Bit 9 - Virtual Output 9 status Bit 8 - Virtual Output 8 status Bit 7 - Virtual Output 7 status Bit 6 - Virtual Output 6 status Bit 5 - Virtual Output 5 status Bit 4 - Virtual Output 4 status Bit 3 - Virtual Output 3 status Bit 2 - Virtual Output 2 status Bit 1 - Virtual Output 1 status	BM(16)

Bit 0 - Virtual Output A status

47370 System Status (Logic Var 48 to 63) BM(16)
Read only:
Bit 15 - Target reset key
Bit 14 - Output circuit monitor
Bit 13 - Alarm minor
Bit 12 - Alarm major
Bit 11 - Alarm logic
Bit 10 - 101SC
Bit 9 - 101C
Bit 8 - 101T
Bit 7 - 186
Bit 6 - 86
Bit 5 - 162
Bit 4 - 62
Bit 3 - Input 4 status
Bit 2 - Input 3 status
Bit 1 - Input 2 status
Bit 0 - Input 1 status

47371 System Status (Logic Var 64 to 79) BM(16)
Read only:
Bit 15 - 159X tripped
Bit 14 - 59X tripped
Bit 13 - 59 phase tripped
Bit 12 - 24 picked up
Bit 11 - 24 tripped
Bit 10 - 47 picked-up
Bit 9 - 47 tripped
Bit 8 - 27 auxiliary picked-up
Bit 7 - 27 phase picked-up
Bit 6 - 27 auxiliary tripped
Bit 5 - 27 phase tripped
Bit 4 - Settings Group 3
Bit 3 - Settings Group 2
Bit 2 - Settings Group 1
Bit 1 - Settings Group 0
Bit 0 - Alarm reset key

47372 System Status (Logic Var 80 to 95) BM(16)
Read only:
Bit 15 - 60FL
Bit 14 - 25 tripped
Bit 13 - 25 voltage monitor 2
Bit 12 - 25 voltage monitor 1
Bit 11 - 32 picked-up
Bit 10 - 32 tripped
Bit 9 - Spare
Bit 8 - 581 tripped
Bit 7 - 481 tripped
Bit 6 - 381 tripped
Bit 5 - 281 tripped
Bit 4 - 181 tripped
Bit 3 - 81 tripped
Bit 2 - 159X picked-up
Bit 1 - 59X picked-up
Bit 0 - 59 phase picked-up

47373 Current Active Group Setting SI
Read only: 0 to 3

47374	Current Group Control Setting Read only: ASCII character 0, 1, 2, 3, L	ASC(1)
47375	Current Output Control Settings (OutputPulse0) MSBs Read only: Bits 15 to 7 - Spare Bit 6 - Output 6 pulse low Bit 5 - Output 5 pulse low Bit 4 - Output 4 pulse low Bit 3 - Output 3 pulse low Bit 2 - Output 2 pulse low Bit 1 - Output 1 pulse low Bit 0 - Output A pulse low	BM(16)
47376	Current Output Control Settings (OutputPulse1) LSBs Read only: Bits 15 to 7 - Spare Bit 6 - Output 6 pulse high Bit 5 - Output 5 pulse high Bit 4 - Output 4 pulse high Bit 3 - Output 3 pulse high Bit 2 - Output 2 pulse high Bit 1 - Output 1 pulse high Bit 0 - Output A pulse high	BM(16)
47377	Current Output Control Settings (OutputLatch0) MSBs Read only: Bits 15 to 7 - Spare Bit 6 - Output 6 latch low Bit 5 - Output 5 latch low Bit 4 - Output 4 latch low Bit 3 - Output 3 latch low Bit 2 - Output 2 latch low Bit 1 - Output 1 latch low Bit 0 - Output A latch low	BM(16)
47378	Current Output Control Settings (OutputLatch1) LSBs Read only: Bits 15 to 7 - Spare Bit 6 - Output 6 latch high Bit 5 - Output 5 latch high Bit 4 - Output 4 latch high Bit 3 - Output 3 latch high Bit 2 - Output 2 latch high Bit 1 - Output 1 latch high Bit 0 - Output A latch high	BM(16)
47379	Current Output Contact Status Read only: Bits 15 to 7 - Spare Bit 6 - Output 6 Bit 5 - Output 5 Bit 4 - Output 4 Bit 3 - Output 3 Bit 2 - Output 2 Bit 1 - Output 1 Bit 0 - Output A	BM(16)
47380	Active Alarm Flags (SumFlags) MSBs Read only: Bits 15 to 0 - Spare	BM(16)

47381	Active Alarm Flags (SumFlags) LSBs	BM(16)
	Read only:	
	Bits 15 to 13 - Spare	
	BIT 12 - Burn-in test failure	
	BIT 11 - Defaults loaded on demand, via front panel or serial command	
	Bit 10 - Defaults loaded because of an READ error	
	Bit 9 - Calibration defaults loaded	
	Bit 8 - Setting defaults loaded	
	Bit 7 - Watchdog failure	
	Bit 6 - Power Supply error	
	Bit 5 - Calibration error	
	Bit 4 - Analog failure	
	Bit 3 - EEPROM Read / Write Fatal error	
	Bit 2 - MPU Self-test error	
	Bit 1 - ROM (flash) Failure detected	
	Bit 0 - RAM Failure detected	
47382	Active Alarm Flags (ProgAlarms) MSBs	BM(16)
	Read and Write:	
	Bits 15 - Spare	
	Bit 14 - Volts per Hertz alarm	
	Bit 13 - 60 Fuse Loss alarm	
	Bit 12 - Changes Lost alarm	
	Bit 11 - Freq Range alarm	
	Bit 10 - Watt Demand alarm	
	Bit 9 - Var Demand alarm	
	Bit 8 - Logic = None alarm	
	Bit 7 - Flt Rpt Timeout alarm	
	Bit 6 - Virtual Output 15 alarm	
	Bit 5 - Virtual Output 14 alarm	
	Bit 4 - Virtual Output 13 alarm	
	Bit 3 - Setting Group Change Active alarm	
	Bit 2 - Loss of IRIG-B sync or IRIG-B decode problem	
	Bit 1 - An override is active in one or more outputs	
	Bit 0 - EEPROM Non fatal error	
47383	Active Alarm Flags (ProgAlarms) LSBs	BM(16)
	Read and Write:	
	Bit 15 - User settings changed, ('EXIT' with 'Y')	
	Bit 14 - Power reset alarm, hard reset of MPU	
	Bit 13 - Clock problem, real time clock has not been set	
	Bit 12 - Communicating failure alarm, read error on serial port	
	Bit 11 - Operating System Overload detected alarm	
	Bit 10 - Setting group override in effect	
	Bit 9 - Q demand alarm, excessive negative sequence unbalance	
	Bit 8 - Neutral demand alarm	
	Bit 7 - Phase demand alarm	
	Bit 6 - Breaker alarm #3	
	Bit 5 - Breaker alarm #2	
	Bit 4 - Breaker alarm #1	
	Bit 3 - Recloser Lockout	
	Bit 2 - Recloser Fail	
	Bit 1 - Breaker fail alarm	
	Bit 0 - Out 1 CKT Open alarm	
47384	Target Status MSBs	BM(16)
	Read:	
	Bit 15 - 51Q	

Bit 14 - 151N
Bit 13 - 51N
Bit 12 - 51C
Bit 11 - 51B
Bit 10 - 51A
Bit 9 - 150TQ
Bit 8 - 50TQ
Bit 7 - 150TN
Bit 6 - 50TN
Bit 5 - 150TC
Bit 4 - 150TB
Bit 3 - 150TA
Bit 2 - 50TC
Bit 1 - 50TB
Bit 0 - 50TA

Write any value to any of 4 registers to reset all

47385 Target Status Second MSBs BM(16)

Read:

Bit 15 - BF
Bit 14 - 49
Bit 13 - 47
Bit 12 - 46
Bit 11 - 40QP
Bit 10 - 132P
Bit 9 - 32P
Bit 8 - 127N
Bit 7 - 27N
Bit 6 - 127C
Bit 5 - 127B
Bit 4 - 127A
Bit 3 - 27C
Bit 2 - 27B
Bit 1 - 27A
Bit 0 - 24

Write any value to any of 4 registers to reset all.

47386 Target Status Third MSBs BM(16)

Read:

Bit 15 - 581
Bit 14 - 481
Bit 13 - 381
Bit 12 - 281
Bit 11 - 181
Bit 10 - 81
Bit 9 - 67TQ
Bit 8 - 167TN
Bit 7 - 67TN
Bit 6 - 67TC
Bit 5 - 67TB
Bit 4 - 67TA
Bit 3 - 167Q
Bit 2 - 67Q
Bit 1 - 167N
Bit 0 - 67N

Write any value to any of 4 registers to reset all

47387 Target Status LSBs BM(16)

Read:

Bit 15 - 167C

Bit 14 - 167B
 Bit 13 - 167A
 Bit 12 - 67C
 Bit 11 - 67B
 Bit 10 - 67A
 Bit 9 - 362
 Bit 8 - 262
 Bit 7 - 162
 Bit 6 - 62
 Bit 5 - 60FL
 Bit 4 - 159N
 Bit 3 - 59N
 Bit 2 - 59C
 Bit 1 - 59B
 Bit 0 - 59A

Write any value to any of 4 registers to reset all

47388	Current Breaker Status	ASC(1)
	Read only:	
	O for Open	
	C for Closed	
	D for Disabled (off)	
47389-92	Current Active Logic	ASC(8)
	Read only: Current active logic name	
47394-95	Breaker Contact Duty Log - Phase A	FP
47396-97	Breaker Contact Duty Log - Phase B	FP
47398-99	Breaker Contact Duty Log - Phase C	FP
	Read: If Breaker Duty Type = Off or Maximum Breaker Duty = 0, reads undefined floating point value of 0xFFFFFFFF. Otherwise, reads 0.00 to 200.00%.	
	Write: 0.00 to 200.00%.	
47400-01	Breaker Operation Counter	LI
	Read and Write:	
	0 to 99,999	
47410-11	Yesterday's Peak Demand Current - Phase A	FP
47415-16	Yesterday's Peak Demand Current - Phase B	FP
47420-21	Yesterday's Peak Demand Current - Phase C	FP
47425-26	Yesterday's Peak Demand Current - Neutral	FP
47430-31	Yesterday's Peak Demand Current - Negative Seq	FP
	Read only: Any value (Amps)	
47412	Yesterday's Peak Demand Timestamp - Day	INT
47417	Yesterday's Peak Demand Timestamp - Day	INT
47422	Yesterday's Peak Demand Timestamp - Day	INT
47427	Yesterday's Peak Demand Timestamp - Day	INT
47432	Yesterday's Peak Demand Timestamp - Day	INT
	Read only: any value (days since 01/01/1984).	
47413-14	Yesterday's Peak Demand Timestamp - Millisecond	LI
47418-19	Yesterday's Peak Demand Timestamp - Millisecond	LI
47423-24	Yesterday's Peak Demand Timestamp - Millisecond	LI
47428-29	Yesterday's Peak Demand Timestamp - Millisecond	LI
47433-34	Yesterday's Peak Demand Timestamp - Millisecond	LI
	Read only: 0 to 86,399,999 Milli-seconds	
47435-36	Today's Peak Demand Current - Phase A	FP
47440-41	Today's Peak Demand Current - Phase B	FP
47445-46	Today's Peak Demand Current - Phase C	FP

47450-51	Today's Peak Demand Current - Neutral	FP
47455-56	Today's Peak Demand Current - Negative Seq	FP
	Read only: Any value (Amps)	
47437	Today's Peak Demand Timestamp - Day	INT
47442	Today's Peak Demand Timestamp - Day	INT
47447	Today's Peak Demand Timestamp - Day	INT
47452	Today's Peak Demand Timestamp - Day	INT
47457	Today's Peak Demand Timestamp - Day	INT
	Read only: any value (days since 01/01/1984).	
47438-39	Today's Peak Demand Timestamp - Millisecond	LI
47443-44	Today's Peak Demand Timestamp - Millisecond	LI
47448-49	Today's Peak Demand Timestamp - Millisecond	LI
47453-54	Today's Peak Demand Timestamp - Millisecond	LI
47458-59	Today's Peak Demand Timestamp - Millisecond	LI
	Read only: 0 to 86,399,999 Milli-seconds	
47460-61	Peak Demand Current Since Reset - Phase A	FP
47465-66	Peak Demand Current Since Reset - Phase B	FP
47470-71	Peak Demand Current Since Reset - Phase C	FP
47475-76	Peak Demand Current Since Reset - Neutral	FP
47480-81	Peak Demand Current Since Reset - Negative Seq	FP
	Read and Write: Any value (Amps)	
47462	Peak Demand Since Reset Timestamp - Day	INT
47467	Peak Demand Since Reset Timestamp - Day	INT
47472	Peak Demand Since Reset Timestamp - Day	INT
47477	Peak Demand Since Reset Timestamp - Day	INT
47482	Peak Demand Since Reset Timestamp - Day	INT
	Read only: any value (days since 01/01/1984).	
47463-64	Peak Demand Since Reset Timestamp - Millisecond	LI
47468-69	Peak Demand Since Reset Timestamp - Millisecond	LI
47473-74	Peak Demand Since Reset Timestamp - Millisecond	LI
47478-79	Peak Demand Since Reset Timestamp - Millisecond	LI
47483-84	Peak Demand Since Reset Timestamp - Millisecond	LI
	Read only: 0 to 86,399,999 Milli-seconds	
47486	Reset Logic Alarm Information	SI
47487	Reset Major Alarm Information	SI
47488	Reset Minor Alarm Information	SI
47489	Reset Relay Alarm Information	SI
47490	Reset Load Profile	SI
47491	Clear Fault Log	SI
47492	Trigger Fault Record	SI
47493	Clear Events Report	SI
	Read: 0	
	Write: Any value will perform reset / trigger / clear.	
47512	Fault Indicator	SI
	Read only: Most recent Fault number (1 - 255)	
47513	Fault Template Status	SI
	Read only:	
	0: Template not valid for current Fault Selection (Refer to Register 40038). All FLT template values will read 0.	
	1 to 255: Valid user selected Fault Number.	
	The following is the Fault Template (RPT).	
47514	Fault Date and Time - Day	INT

Read only: any value (days since 01/01/1984).

47515-16	Fault Date and Time - Milliseconds Read only: 0 to 86,399,999 Milli-seconds	LI
47517	Fault Event Type Read only: Bit 0 for Breaker Fail Bit 1 for Trip Bit 2 for Logic Bit 3 for Pickup Bit 4 for Fault Record Trigger (Refer to Register 47492)	BM(16)
47518	Fault Active Group Read only: 0 to 3	SI
47519	Fault Targets MSBs Read only: Bit 15 - 51Q Bit 14 - 151N Bit 13 - 51N Bit 12 - 51C Bit 11 - 51B Bit 10 - 51A Bit 9 - 150TQ Bit 8 - 50TQ Bit 7 - 150TN Bit 6 - 50TN Bit 5 - 150TC Bit 4 - 150TB Bit 3 - 150TA Bit 2 - 50TC Bit 1 - 50TB Bit 0 - 50TA	BM(16)
47520	Fault Targets Second MSBs Read only: Bit 15 - BF Bit 14 - 49 Bit 13 - 47 Bit 12 - 46 Bit 11 - 40QP Bit 10 - 132P Bit 9 - 32P Bit 8 - 127N Bit 7 - 27N Bit 6 - 127C Bit 5 - 127B Bit 4 - 127A Bit 3 - 27C Bit 2 - 27B Bit 1 - 27A Bit 0 - 24	BM(16)
47521	Fault Targets Third MSBs Read only: Bit 15 - 581 Bit 14 - 481	BM(16)

Bit 13 - 381
 Bit 12 - 281
 Bit 11 - 181
 Bit 10 - 81
 Bit 9 - 67TQ
 Bit 8 - 167TN
 Bit 7 - 67TN
 Bit 6 - 67TC
 Bit 5 - 67TB
 Bit 4 - 67TA
 Bit 3 - 167Q
 Bit 2 - 67Q
 Bit 1 - 167N
 Bit 0 - 67N

47522	Fault Targets LSBs	BM(16)
	Read only:	
	Bit 15 - 167C	
	Bit 14 - 167B	
	Bit 13 - 167A	
	Bit 12 - 67C	
	Bit 11 - 67B	
	Bit 10 - 67A	
	Bit 9 - 362	
	Bit 8 - 262	
	Bit 7 - 162	
	Bit 6 - 62	
	Bit 5 - 60FL	
	Bit 4 - 159N	
	Bit 3 - 59N	
	Bit 2 - 59C	
	Bit 1 - 59B	
	Bit 0 - 59A	
47524	Fault Clearing Time Status	SI
	Read only:	
	0 if Valid Fault Clearing Time (Registers 47525-26) value	
	1 if No pickup	
	2 if N/A; Out of range	
47525-26	Fault Clearing Time	FP
	Read only:	
	0 if Fault Clearing Time Status is not 0 (not valid).	
	Time (xxx.xxx) in Seconds if Fault Clearing Time Status is 0 (valid).	
47527	Fault Breaker Operate Time Status	SI
	Read only:	
	0 if Valid Fault Breaker Operate Time (Registers 47528-29) value	
	1 if Unknown	
	2 if N/A; Out of range	
	3 if No operation	
	4 if Disabled	
47528-29	Fault Breaker Operate Time	FP
	Read only:	
	0 if Fault Breaker Operate Time Status is not 0 (not valid).	
	Time (xxx.xxx) in Seconds if Fault Breaker Operate Time Status is 0 (valid).	
47530-31	Fault Phase A Current Magnitude	FP
47533-34	Fault Phase B Current Magnitude	FP
47536-37	Fault Phase C Current Magnitude	FP
47539-40	Fault Residual Current Magnitude	FP

47542-43	Fault Negative Seq. Current Magnitude Read only: Value in Amps	FP
47544-45	Fault Phase A Voltage Magnitude	FP
47546-47	Fault Phase B Voltage Magnitude	FP
47548-49	Fault Phase C Voltage Magnitude	FP
47550-51	Fault Neutral Voltage Magnitude Read only: Value in Volts	FP
47554-55	Distance to Fault Read only: Any value	FP
47556-57	Fault Generator Frequency	FP
47558-59	Fault Bus Frequency Read only: Value in Hz	FP

The following is the Report Template (RPT).

47595-719	Report Text Read only: ASCII string (Illegal message response generated for invalid Report Focus value).
-----------	---

Metering Parameters

49719	Part Number Read only: 0 to 999	INT
49720-21	Generator Frequency	FP
49722-23	Bus Frequency	FP
49724-25	Slip Frequency Read only: Value in Hertz	FP
49726-27	Phase A Current Magnitude	FP
49729-30	Phase B Current Magnitude	FP
49732-33	Phase C Current Magnitude	FP
49738-39	Negative Sequence Current Magnitude	FP
49740-41	Neutral Current Magnitude	FP
49744-45	Ground Current Magnitude Read only: Value in Amps. If not applicable, reads undefined floating point value of 0xFFFFFFFF.	FP
49746-47	3 Phase Watts Read only: Value in K-Watts. If not applicable, reads undefined floating point value of 0xFFFFFFFF.	FP
49748-49	3 Phase Power Factor Read only: -1.00 to 1.00	FP
49750-51	3 Phase Vars Read only: Value in K-Vars. If not applicable, reads undefined floating point value of 0xFFFFFFFF.	FP
49742-43	Zero Sequence Voltage	FP
49752-53	3 Phase VA*	FP
49754-55	Negative Sequence Voltage	FP
49756-57	Phase A Voltage	FP
49758-59	Phase B Voltage	FP
49760-61	Phase C Voltage	FP
49762-63	Phase A-B Voltage	FP
49764-65	Phase B-C Voltage	FP
49766-67	Phase C-A Voltage	FP
49768-69	V3x Voltage	FP

49770-71	Bus Voltage	FP
	Read only: Value in Volts. If not applicable, reads undefined floating point value of 0xFFFFFFFF. *Value in KVA	
49772-73	Slip Angle	FP
	Read only: Value in degrees	
49774-75	Phase A Watts	FP
49776-77	Phase B Watts	FP
49778-79	Phase C Watts	FP
	Read only: Value in K-Watts	
49780-81	Phase A Vars	FP
49782-83	Phase B Vars	FP
49784-85	Phase C Vars	FP
	Read only: Value in K-Vars	
49835-74	Error Details	ASC(40)
	Read only: ASCII string	
49875-999	Contiguous Poll Block	Mixed
	Read Only: Mixed values.	



SECTION 4 • ASCII CROSS REFERENCE

ASCII Command versus Modbus® Register Cross Reference

ASCII Command	Modbus Registers
A=<password>	40002-40005
CO-101	40136
CO-43	40120
CO-143	40122
CO-243	40124
CO-343	40126
CO-GROUP=<settings group>	40118
CO-OUT1	40142
CO-OUT2	40144
CO-OUT3	40146
CO-OUT4	40148
CO-OUT5	40150
CO-OUTA	40140
CO-OUTALL	40138
CS-101	40135
CS-43	40119
CS-143	40121
CS-243	40123
CS-343	40125
CS-GROUP=<settings group>	40117
CS-OUT1	40141
CS-OUT2	40143
CS-OUT3	40145
CS-OUT4	40147
CS-OUT5	40149
CS-OUTA	40139
CS-OUTALL	40137
EXIT	40001
GS-PWC=<Control password>,<Control path>	40090-40093,40094
GS-PWG=<Global password>,<Global path>	40080-40083,40084
GS-PWR=<Report password>,<Report path>	40095-40098,40099
GS-PWS=<Settings password>,<Settings path>	40085-40088,40089
M-IA	49726-49727
M-IB	49729-49730
M-IC	49732-49733
M-IG	49744-49745
M-IQ	49738-49739
M-IN	49740-47741
M-VA	49756-49757
M-VB	49758-49759
M-VC	49760-47761
M-VAB	49762-49763
M-VBC	49764-49465
M-VCA	49766-49767
M-V2	49754-49755
M-3V0	49742-49753
M-VX	49770-49771
M-V3X	49768-49769
M-WATT	49746-49747
M-WATTA	49774-49775

ASCII Command	Modbus Registers
M-WATTB	49776-49777
M-WATTC	49778-49779
M-VAR	49750-49751
M-VARA	49780-49781
M-VARB	49782-49783
M-VARC	49784-49785
M-S	49752-49753
M-PF	49748-49749
M-FREQG	49720-49721
M-FREQB	49722-49723
M-FREQS	49724-49725
RA-MAJ	47595-47719,40039
RA-MAJ=0	47487
RA-LGC	47595-47719,40039
RA-LGC=0	47486
RA-MIN	47595-47719,40039
RA-MIN=0	47488
RA-REL	47595-47719,40039
RA-REL=0	47489
RB-DUTYA=<% of duty>	47394-47395
RB-DUTYB=<% of duty>	47396-47397
RB-DUTYC=<% of duty>	47398-47399
RB-OPCNTR=<number of operations>	47400-47401
RD-PIA	47460-47461,47463-47464,47462
RD-PIB	47465-47466,47468-47469,47467
RD-PIC	47470-47471,47473-47474,47472
RD-PIN	47475-47476,47478-47479,47477
RD-PIQ	47480-47481,47483-47484,47482
RD-PVAR	47194-47195,47196,47197-47198,47199-47200,47201,47202-47203
RD-PWATT	47204-47205,47206,47207-47208,47209-47210,47211,47212-47213
RD-TIA	47435-47436,47438-47439,47437
RD-TIB	47440-47441,47443-47444,47442
RD-TIC	47445-47446,47448-47449,47447
RD-TIN	47450-47451,47453-47454,47452
RD-TIQ	47455-47456,47458-47459,47457
RD-TVAR	47214-47215,47216,47217-47218,47219-47220,47221,47222-47223
RD-TWATT	47224-47225,47226,47227-47228,47229-47230,47231,47232-47233
RD-YIA	47410-47411,47413-47414,47412
RD-YIB	47415-47416,47418-47419,47417
RD-YIC	47420-47421,47423-47424,47422
RD-YIN	47425-47426,47428-47429,47427
RD-YIQ	47430-47431,47433-47434,47432
RD-YVAR	47234-47235,47236,47237-47238,47239-47240,47241,47242-47243
RD-YWATT	47244-47245,47246,47247-47248,47249-47250,47251,47252-47253
RF	47595-47719,40039
RF-#	47595-47719,40039,40040
RF-NEW	47595-47719,40039
RF=0	47491
RF=TRIG	47492
RG-DATE=<date>	47364

ASCII Command	Modbus Registers
RG-STAT	47367-47383,47388-47392
RG-TARG	47384-47387
RG-TIME=<time>	47365-47366
RG-VER	47274-47277,47324-47334,47282-47289,47296-47302, 47310-47316
RG-ADDR1	47362
RG-ADDR2	47363
RG-GRPACTIVE	47373
RG-GRPCNTRL	47374
RG-LOGIC	47389
RG-OUTCNTRL	47375-47376,47377-47378
RG-OUTSTAT	47379
RS	47595-47719,40039
RS-#	47595-47719,40039,40040
RS-F#	47595-47719,40039,40040
RS-NEW	47595-47719,40039
RS=0	47493
S#-50TN=<pickup>,<time delay>,<direction>	40264-40265,40266-40267,40268
S#-50TP=<pickup>,<time delay>,<direction>	40259-40260,40261-40262,40263
S#-50TQ=<pickup>,<time delay>,<direction>	40269-40270,40271-40272,40273
S#-150TN=<pickup>,<time delay>,<direction>	40279-40280,40281-40282,40283
S#-150TP=<pickup>,<time delay>,<direction>	40274-40275,40276-40277,40278
S#-150TQ=<pickup>,<time delay>,<direction>	40284-40285,40286-40287,40288
S#-51N=<pickup>,<time dial>,<curve>,<direction>	40308-40309,40310-40311,40312-40313,40314
S#-51P=<pickup>,<time dial>,<curve>,<direction>	40301-40302,40303-40304,40305-40306,40307
S#-51Q=<pickup>,<time dial>.<curve>,<direction>	40315-40316,40317-40318,40319-40320,40321
S#-151N=<pickup>,<time dial>.<curve>,<direction>	40322-40323,40324-40325,40326-40327,40328
S#-27R=<pickup>,<mode>	40429-40430,40431
S#-27P=<pickup>,<time delay>	40476-40477,40478-40479
S#-27X=<pickup>,<time delay>	40480-40481,40482-40483
S#-32 = <pickup>,<time delay>,<mode>	40511-40512,40513-40514,40515
S#-59P=<pickup>,<time delay>	40436-40437,40438-40439
S#-59X=<pickup>,<time delay>	40440-40441,40442-40443
S#-159X=<pickup>,<time delay>	40516-40617,40518-40519
S#-47=<pickup>,< time delay >	40432-40433,40434-40435
S#-791=<first auto reclose delay>	40406-40407
S#-792=<second auto reclose delay>	40408-40409
S#-793=<third auto reclose delay>	40410-40411
S#-794=<fourth auto reclose delay>	40412-40413
S#-79R=<reset time delay>	40414-40415
S#-79F=<reclose fail time delay>	40416-40417
S#-79M=<max reclose time>	40418-40419
S#-79SCB=<sequence control>	40420
S#-81=<pickup>,<time delay>,<mode>	40444-40445,40446-40447,40448
S#-181=<pickup>,<time delay>,<mode>	40449-40450,40451-40452,40453
S#-281=<pickup>,<time delay>,<mode>	40454-40455,40456-40457,40458
S#-381=<pickup>,<time delay>,<mode>	40459-40460,40461-40462,40463
S#-481=<pickup>,<time delay>,<mode>	40464-40465,40466-40467,40468
S#-581=<pickup>,<time delay>,<mode>	40469-40470,40471-40472,40473
S#-81INH=<inhibit setting>	40474-40475
S#-62=<time delay 1>,<time delay2>	40359-40360,40361-40362
S#-162=<time delay 1>,<time delay2>	40363-40364,40365-40366
S#-67=<neutral polarizing mode>	40507-40508
S#-24=<pickup>,<time delay>,<reset delay>	40484-40485, 40486-40487, 40488-40489

ASCII Command	Modbus Registers
S#-25=<delta volts>, <phase angle>, <frequency>, <mode>	40490-40491, 40492-40493, 40494-40495, 40496
S#-25VM=<live volts>, <dead volts>, <time delay>, <mode1>, <mode2>	40497-40498, 40499-40500, 40501-40502, 40503-40504, 40505-40506
SA-BKR1=<mode>,<alarm limit>	41096,41097-41098
SA-BKR2=<mode>,<alarm limit>	41099,41100-41101
SA-BKR3=<mode>,<alarm limit>	41102,41103-41104
SA-DIN=<alarm level>	41261-41262
SA-DIP=<alarm level>	41259-41260
SA-DIQ=<alarm level>	41263-41264
SA-LGC=<alarm number>	41269-41270
SA-MAJ=<alarm number>	41265-41266
SA-MIN=<alarm number>	41267-41268
SA-RESET=<reset Alarm Logic>	41419-41424,41427-41432
SA-DVAR=<fwd var alm level>, <rev var alm level>	41251-41252,41253,41254
SA-DWATT=<fwd watt alm level>, <rev watt alm level>	41255-41256,41257-41258
SA-24 = <volts / Hertz alarm level>	41247
SB-DUTY=<mode>,<dmax.>,<blk bkr logic>	41092,41093-41094,41110-41115,41118-41123
SB-LOGIC=<breaker close logic equation>	41126-41129,41134-41137
SG-CLK=<date format>,<time format><dst enable>	41272,41273,41274
SG-COM0=<baud rate>,<flow control>, <page length>,<ack>	40962,40964,40965,40966
SG-COM1=<baud rate>,<relay address>, <flow control>,<page length>,<ack>	40971,40972,40973,40974,40975
SG-COM2=<baud rate>,<relay address>,,,, <parity>,<remote delay>,<stop bits>	40980,40981,40986,40987,40988
SG-CTP=<ratio>	41021
SG-CTG=<ratio>	41022
SG-VTP=<vt ratio>,<connection>, <27/59 mode>,<51/27R mode>	41033-41034,41035-41036,41037-41038,41039-41040
SG-VTX=<aux vt ratio>,<connection>	41041-41042,41043-41044,41045
SG-NOM=<Nom Volts>,<Nom Amps>	40602-40603,40604-40605
SG-DIN=<alarm interval>,<calculation method>	41276
SG-DIP=<alarm interval>,<calculation method>	41275
SG-DIQ=<alarm interval>,<calculation method>	41277
SG-FREQ=<frequency>	41018
SG-HOLD=<output hold enable>	41284
SG-ID=<relay ID>,<station ID>	43438-43442,43443-43457
SG-CLK=<date format>,<clock format><daylight savings format>	41272,41273,41274
SG-IN1=<input recognition>,<input debounce >	40618,40619
SG-IN2=<input recognition>,<input debounce >	40620,40621
SG-IN3=<input recognition>,<input debounce >	40622,40623
SG-IN4=<input recognition>,<input debounce >	40624,40625
SG-PHROT=<rotation sequence>	41021
SG-SCREEN10=<menu screen>	41327-41330
SG-SCREEN11=<menu screen>	41331-41334
SG-SCREEN12=<menu screen>	41335-41338
SG-SCREEN13=<menu screen>	41339-41342
SG-SCREEN14=<menu screen>	41343-41346
SG-SCREEN15=<menu screen>	41347-41350
SG-SCREEN16=<menu screen>	41351-41354
SG-SCREEN1=<menu screen>	41291-41294
SG-SCREEN2=<menu screen>	41295-41298

ASCII Command	Modbus Registers
SG-SCREEN3=<menu screen>	41299-41302
SG-SCREEN4=<menu screen>	41303-41306
SG-SCREEN5=<menu screen>	41307-41310
SG-SCREEN6=<menu screen>	41311-41314
SG-SCREEN7=<menu screen>	41315-41318
SG-SCREEN8=<menu screen>	41319-41322
SG-SCREEN9=<menu screen>	41323-41326
SG-SGCON=<time>	40871
SG-TARG=<target list>,<reset Targ Logic>	41287-41290,41403-41408,41411-41416
SG-TRIG=<trip trigger logic equation>,<pu trigger logic equation>,<logic trigger logic equation>	41355-41360,41363-41368,41371-41376,41379-41384,41387-41392,41395-41400
SG-LOG = <load profile interval>	41045
SG-LINE = <Z1 mag>, <Z1 Angle>, <Z0 mag>, <Z0 Angle>, <Line Length>	41046-41047,41048-41049, 41050-41051,41052-41053,41054
SL-43=<mode>	42091
SL-143=<mode>	42092
SL-243=<mode>	42093
SL-343=<mode>	42094
SL-101=<mode>	42099
SL-24 = <mode>, <block logic>	43355,43356-43361,43364-43369
SL-25 = <mode>, <block logic>	43372,43373-43378, 43381-43386
SL-150TN=<mode>,<block logic equation>	41573,41574-41579,41582-41587
SL-150TP=<mode>,<block logic equation>	41556,41557-41562,41565-41570
SL-150TQ=<mode>,<block logic equation>	41590,41591-41596,41599-41604
SL-162=<mode>,<ini logic equation>,<block logic equation>	41877,41878-41883,41886-41891,41894-899,41902-41907
SL-50TN=<mode>,<block logic equation>	41522,41523-41528,41531-41536
SL-50TP=<mode>,<block logic equation>	41505,41506-41511,41514-41519
SL-50TQ=<mode>,<block logic equation>	41539,41540-41545,41548-41553
SL-51N=<mode>,<block logic equation>	41708,41709-41714,41717-41722
SL-51P=<mode>,<block logic equation>	41691,41692-41697,41700-41705
SL-51Q=<mode>,<block logic equation>	41725,41726-41731,41734-41739
SL-151N=<mode>,<block logic equation>	41759,41760-41765,41768-41773
SL-27P=<mode>,<block logic equation>	41910,41911-41916,41919-41924
SL-27X=<mode>,<block logic equation>	41927, 41928-41933, 41936-41941
SL-59P=<mode>,<block logic equation>	41944,41945-41950,41953-41958
SL-59X=<mode>,<block logic equation>	41961,41962-41967,41970-41975
SL-159X=<mode>,<block logic equation>	41776,41777-41782,41785-41790
SL-47=<mode>,<block logic equation>	43338,43339-43944,43947-43952
SL-79=<mode>,<RI logic>,<Status logic>,<Wait logic>,<Lockout logic>	43173,43174-43179,43182-43187,43190-43195,43198-43203,43206-43211,43214-43219,43222-43227, 43230-43235
SL-81=<mode>,<block logic>	43236,43237-43242,43245-43250
SL-181=<mode>,<block logic>	43253,432543-43259,43262-43267
SL-281=<mode>,<block logic>	43270,43271-43276,43279-43284
SL-381=<mode>,<block logic>	43287,43288-43293,43296-43301
SL-481=<mode>,<block logic>	43304,43305-43310,43313-43318
SL-581=<mode>,<block logic>	43321,43322-43327,43330-43335
SL-62=<mode>,< ini logic equation>,<block logic equation>	41844,41845-41850,41853-41858,41861-41866,41869-41874
SL-BF=<mode>,<ini logic equation>,<block logic equation>	41658,41659-41664,41667-41672,41675-41680,41683-41688
SL-GROUP=<mode>,<D0 logic equation>,<D1 logic equation>,<D2 logic equation>,<D3 logic equation>,<auto logic equation>	42010,42027-42032,42035-42040,42043-42048,42051-42056,42059-42064,42067-42072,42075-42080, 42083-42088,42011-42016,42019-42024
SL-N=<name>	41465-41468

ASCII Command	Modbus Registers
SL-VOA=<boolean logic equation>	42133,42134-42139,42142-42147,42150-42155,42158-42163,42166-42171,42174-42179,42182-42187, 42190-42195
SL-VO1=<boolean logic equation>	42198,42199-42204,42207-42212,42215-42220,42223-42228,42231-42236,42239-42244,42247-42252,42255-42260
SL-VO2=<boolean logic equation>	42263,42264-42269,42272-42277,42280-42285,42288-42293,42296-42301,42304-42309,42312-42317,42320-42325
SL-VO3=<boolean logic equation>	42328,42329-42334,42337-42342,42345-42350,42353-42358,42361-42366,42369-42374,42377-42382,42385-42390
SL-VO4=<boolean logic equation>	42393,42394-42399,42402-42407,42410-42415,42418-42423,42426-42431,42434-42439,42442-42447,42450-42455
SL-VO5=<boolean logic equation>	42458,42459-42464,42467-42472,42475-42480,42483-42488,42491-42496,42499-42504,42507-42512,42515-42520
SL-VO6=<boolean logic equation>	42523,42524-42529,42532-42537,42540-42545,42548-42553,42556-42561,42564-42569,42572-42577,42580-42585
SL-VO7=<boolean logic equation>	42588,42589-42594,42597-42602,42605-42610,42613-42618,42621-42626,42629-42634,42637-42642,42645-42650
SL-VO8=<boolean logic equation>	42653,42654-42659,42662-42667,42670-42675,42678-42683,42686-42691,42694-42699,42702-42707,42710-42715
SL-VO9=<boolean logic equation>	42718,42719-42724,42727-42732,42735-42740,42743-42748,42751-42756,42759-42764,42767-42772,42775-42780
SL-VO10=<boolean logic equation>	42783,42784-42789,42792-42797,42800-42805,42808-42813,42816-42821,42824-42829,42832-42837,42840-42845
SL-VO11=<boolean logic equation>	42848,42849-42854,42857-42862,42865-42870,42873-42878,42881-42886,42889-42894,42897-42902,42905-42910
SL-VO12=<boolean logic equation>	42913,42914-42919,42922-42927,42930-42935,42938-42943,42946-42951,42954-42959,42962-42967,42970-42975
SL-VO13=<boolean logic equation>	42978,42979-42984,42987-42992,42995-43000,43003-42008,43011-43016,43019-42024,43027-42032,43035-42040
SL-VO14=<boolean logic equation>	43043,43044-42049,43052-42057,43060-42065,43068-42073,43076-43081,43084-42089,43092-42097,43100-42105
SL-VO15=<boolean logic equation>	43108,43109-42114,43117-42122,43125-42130,43133-42138,43141-43146,43149-42154,43157-42162,43165-42170
SL: <custom logic>,<logic1>,<logic2>,<logic3>,<logic4>,<logic5>,<logic6>,<logic7>	41473-41478,41477-41482,41481-41486,41485-41490,41489-41494,41493-41498,41497-41502,41501-41506
SN-43=<name>,<true label>,<false label>	43498-43502,43503-43506,43507-43510
SN-143=<name>,<true label>,<false label>	43511-43515,43516-43519,43520-43523
SN-243=<name>,<true label>,<false label>	43524-43528,43529-43532,43533-43536
SN-343=<name>,<true label>,<false label>	43537-43541,43542-43545,43546-43549
SN-IN1=<name>,<true label>,<false label>	43849-43853,43854-43857,43858-43861
SN-IN2=<name>,<true label>,<false label>	43862-43866,43867-43870,43871-43874

ASCII Command	Modbus Registers
SN-IN3=<name>,<true label>,<false label>	43875-43879,43880-43883,43884-43887
SN-IN4=<name>,<true label>,<false label>	43888-43892,43893-43896,43897-43900
SN-VOA=<name>,<true label>,<false label>	43602-43606,43607-43610,43611-43614
SN-VO1=<name>,<true label>,<false label>	43615-43619,43620-43623,43624-43627
SN-VO2=<name>,<true label>,<false label>	43628-43632,43633-43636,43637-43640
SN-VO3=<name>,<true label>,<false label>	43641-43645,43646-43649,43650-43653
SN-VO4=<name>,<true label>,<false label>	43654-43658,43659-43662,43663-43666
SN-VO5=<name>,<true label>,<false label>	43667-43671,43672-43675,43676-43679
SN-VO6=<name>,<true label>,<false label>	43680-43684,43685-43688,43689-43692
SN-VO7=<name>,<true label>,<false label>	43693-43697,43698-43701,43702-43705
SN-VO8=<name>,<true label>,<false label>	43706-43710,43711-43714,43715-43718
SN-VO9=<name>,<true label>,<false label>	43719-43723,43724-43727,43728-43731
SN-VO10=<name>,<true label>,<false label>	43732-43736,43737-43740,43741-43744
SN-VO11=<name>,<true label>,<false label>	43745-43749,43750-43753,43754-43757
SN-VO12=<name>,<true label>,<false label>	43758-43762,43763-43766,43767-43770
SN-VO13=<name>,<true label>,<false label>	43771-43775,43776-43779,43780-43783
SN-VO14=<name>,<true label>,<false label>	43784-43788,43789-43792,43793-43796
SN-VO15=<name>,<true label>,<false label>	43797-43801,43802-43805,43806-43809
SP-60FL=<I_Blks>,<V_Blks>	40903-40904,40905-40906
SP-79ZONE=<pickup logic>	40887-40892,40895-40900
SP-BF=<time delay>	40606-40607
SP-CURVE=<a>,,<c>,<n>,<r>	40608-40609,40610-40611,40612-40613,40614-40615,40616-40617
SP-GROUP1=<switch time>,<switch level>,<return time>,<return level>,<prot element>	40872,40873,40874,40875,40876
SP-GROUP2=<switch time>,<switch level>,<return time>,<return level>,<prot element>	40877,40878,40879,40880,40881
SP-GROUP3=<switch time>,<switch level>,<return time>,<return level>,<prot element>	40882,40883,40884,40885,40886



APPENDIX A • SETTING UP A DHCP SERVER BETWEEN BE1-951 AND PC

Introduction

This appendix explains how to set up a DHCP server using a BE1-951 with Modbus/TCP and a crossover Ethernet cable. A downloadable freeware program, Tftpd32, is required.

Procedure

1. Direct your browser to <http://tftpd32.jounin.net> and download the Tftpd32 v4.00 software installation file. After download completes, install the software.
2. Connect the Ethernet port of your PC directly to the Ethernet port of the BE1-951 using an Ethernet crossover cable (must NOT be a standard Ethernet cable).
3. Verify that your PC's network adapter is set to a static IP address such as 10.0.1.55 (10.0.1.x). Open the Control Panel → Network Connections on your computer. Right click on the network adapter being used and select *Properties*. In the center of the *Local Area Connection Properties* dialog box, scroll down and double-click on *Internet Protocol (TCP/IP)*. Record your existing settings and then set the following parameters shown in Figure A-1.

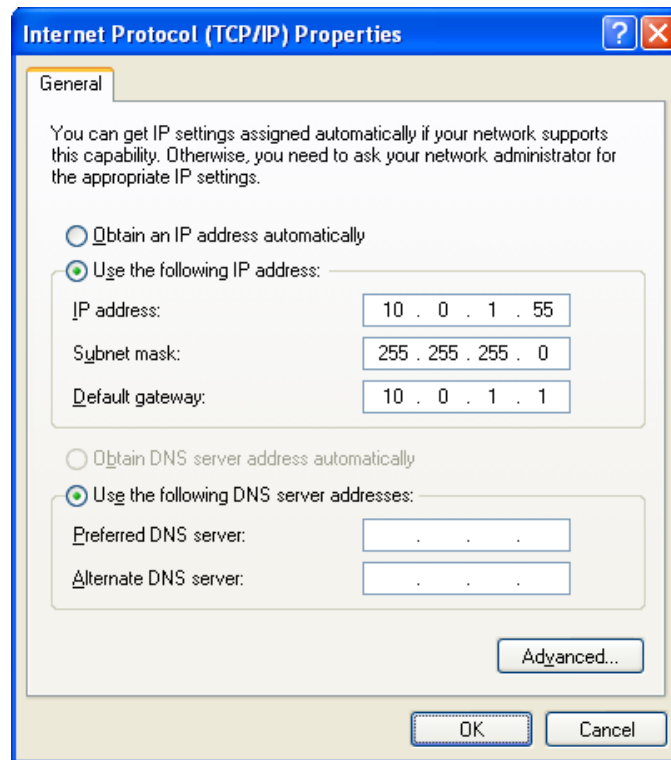


Figure A-1. Internet Protocol (TCP/IP) Properties Screen

4. Start Tftpd32 and click the *Settings* button. On the *Global* tab, enable only the **DHCP Server**. See Figure A-2.

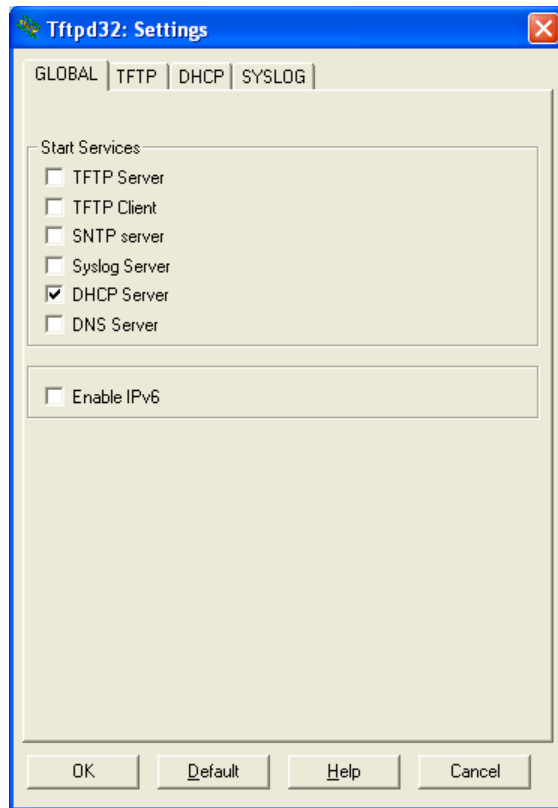


Figure A-2. Global Tab

- On the *DHCP* tab, set the *IP pool starting address* to **10.0.1.100**, *Size of pool* to **10**, *Default router* to **10.0.1.1** and *Mask* to **255.255.255.0**. Verify that **Bind DHCP to this address** is checked and select address **10.0.1.55**. Verify that **Persistent leases** is checked. See Figure A-3. Close Tftpd32.

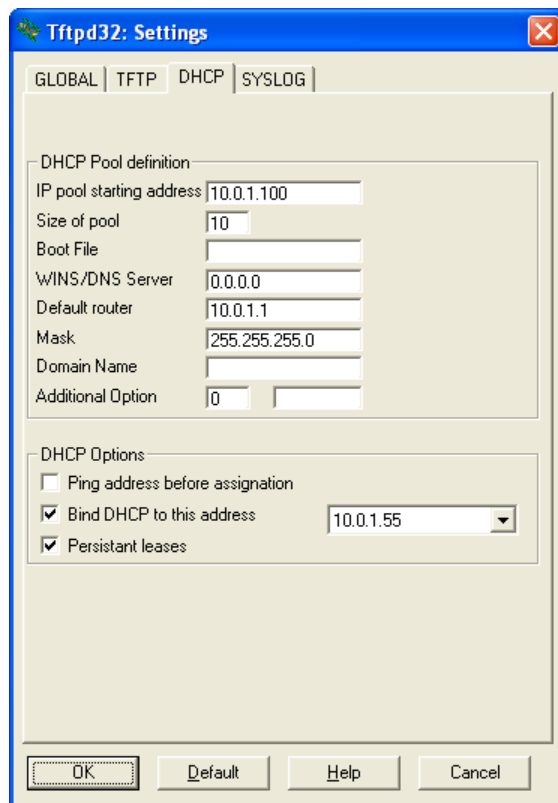


Figure A-3. DHCP Tab

6. Start Tftpd32. Apply power to the BE1-951. Wait approximately 120 seconds for the relay to obtain an IP address.
7. Open the Basler Modbus/TCP discovery program included on the BE1-951 CD. The BE1-951 relay will appear in the list after the *Refresh* button is pressed. See Figure A-4.

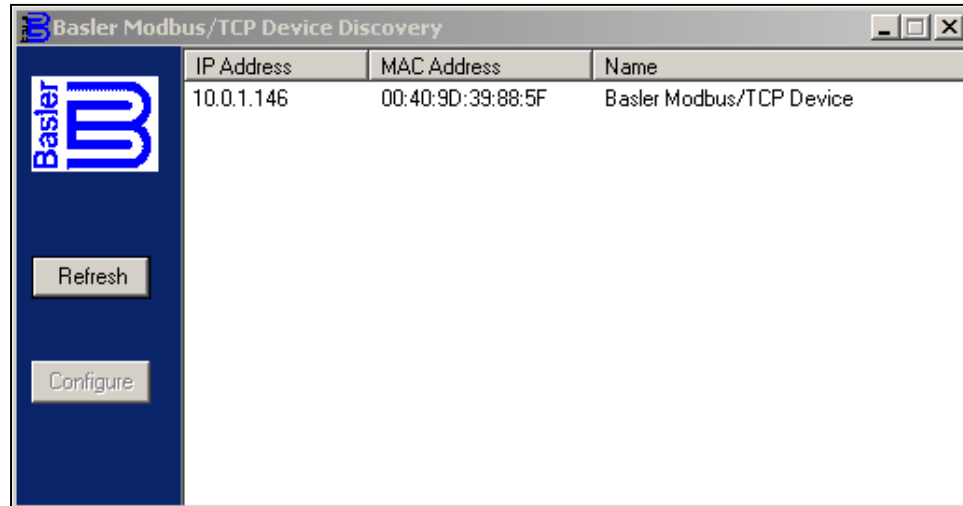


Figure A-4. Basler Modbus/TCP Device Discovery Screen

8. Click on the IP address displayed and then click on the *Configure* button. Follow the procedure in Section 1 under *General Information, Modbus® Modes of Operation, Modbus/TCP*, to assign a static IP address to the BE1-951.
9. Power must be cycled to the BE1-951 to use the static IP settings after the procedure is completed.
10. Close Tftpd32. Restore your PC network settings that were saved in Step 3, remove the crossover Ethernet cable and connect the standard Ethernet cable from your PC to the local network.





12570 State Route 143
Highland IL 62249-1074 USA
Tel: +1 618.654.2341
Fax: +1 618.654.2351
email: info@basler.com

No. 59 Heshun Road Loufeng District (N)
Suzhou Industrial Park
215122 Suzhou
P.R. CHINA
Tel: +86 512.8227.2888
Fax: +86 512.8227.2887
email: chinainfo@basler.com

111 North Bridge Road
15-06 Peninsula Plaza
Singapore 179098
Tel: +65 68.44.6445
Fax: +65 68.44.8902
email: singaporeinfo@basler.com